

AIO™ Ceiling Ducted with ERV (Gen 3)

Installation Guide



CONTACT INFO

VIP Customer/Technical Support

Email: vip@innova.co

Phone: [\(212\) 204-2700](tel:(212)204-2700)

DISCLAIMER



IMPORTANT: Installers must complete an INNOVA training session before installation. This document does not replace required training. Failure to complete training may result in improper installation and may void the warranty.

This documentation is intended for informational use only and should not be construed as a binding representation or contract. This documentation is provided “as is” without warranty of any kind, either express or implied. INNOVA and its affiliates disclaim all liability arising from the use or misuse of this documentation.

Illustrations may not be to scale, and all information and dimensions stated herein are subject to change at any time at the sole discretion of INNOVA.

Benefits described herein apply only to the extent that the product is installed correctly in the correct application and used for its intended purpose.

INNOVA is constantly innovating and improving its products and reserves the right to modify product design and specifications without notice, and without incurring any obligations.

CERTIFICATIONS & LISTINGS

The AHRI Certified® mark indicates INNOVA's participation in the AHRI Certification program. For verification of individual certified products, go to www.ahridirectory.org.


ETL Listed. Control Number: 5032306. Conforms to: UL 60335-2-40:2022 Ed.4 | CSA C22.2#60335-2-40:2022 Ed.4 | UL 60335-1:2016 Ed.6 | CSA C22.2#60335-1:2016 Ed.2

MODEL NUMBER NOMENCLATURE

The code identifies the family, model, version, size, voltage, accessories, refrigerant type, and ERV option. See the diagram below for details.

Note: Ceiling Ducted – Mirror Version units use the suffix “-MR” in place of the generation code (e.g., “-3” or “-3SP”), indicating a mirrored (left/right reversed) unit configuration.

Figure 1. AIO™ Model Number Nomenclature

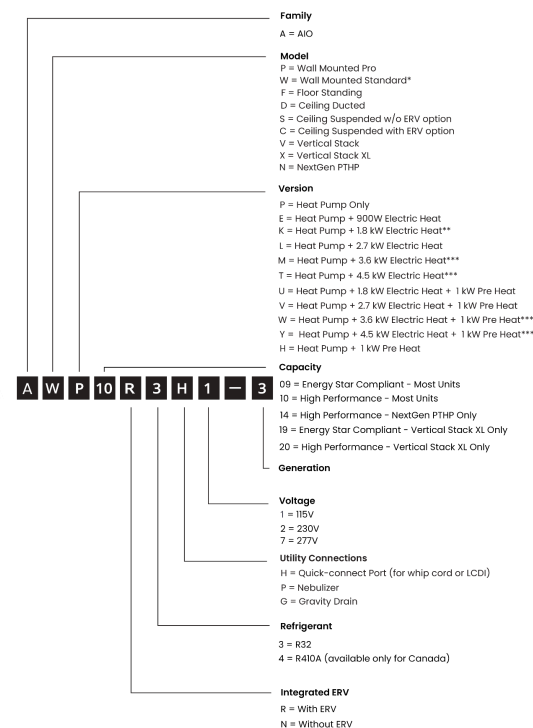

* 8" Vents: Just generation (e.g. = 3)
6" Vents : Generation + SP (e.g. = 3SP)
** Field convertible to 900W
*** AIO™ Vertical Stack XL Only

AIO™ is a registered trademark of INNOVA.

Copyright © 2026 INNOVA. All rights reserved.

CONTENTS

1. ABOUT THIS GUIDE.....	4
1.1 Specific language.....	4
1.2 Safety notices, icons, and symbols.....	4
2. SAFETY GUIDELINES – READ BEFORE INSTALLING.....	5
2.1 Fire/explosion hazards.....	5
2.2 Refrigerant hazards.....	5
2.3 Hot surface hazards.....	6
2.4 Electrical hazards.....	6
2.5 Moving parts hazards.....	7
2.6 Handling and mechanical hazards.....	7
2.7 Installation environment hazards.....	8
2.8 Installer responsibilities.....	9
3. AIO™ CEILING DUCTED WITH ERV OVERVIEW.....	9
3.1 Components and structure.....	9
3.2 Optional accessories.....	10
3.3 Unit Rating Plate.....	10
4. RECEIVING, INSPECTING AND HANDLING THE UNIT.....	11
4.1 Shipping Configuration.....	11
4.2 Carton Dimensions and Weight.....	11
4.3 Inspecting the Carton.....	11
4.4 Moving the Package.....	11
4.5 Storing the Unit.....	12
4.6 Unpacking the Carton.....	12
4.7 Inspect the Unit for Damage.....	12
4.8 Inspect Internal Components.....	12
4.9 Technical Layout Reference.....	13
5. TOOLS AND MATERIALS NEEDED.....	13
6. SITE REQUIREMENTS AND PREPARATION.....	13
6.1 Pre-installation checklist.....	13
6.2 Louver requirements.....	14
6.3 Minimum clearance requirements.....	15
7. INSTALLING THE AIO™ CEILING DUCTED UNIT.....	15
7.1 Installing Exterior Louvers or Vent Terminations....	16
7.2 Affixing the Template to the Ceiling.....	16
7.3 Installing the Ceiling Support Hardware.....	16
7.4 Preparing a condensate drain.....	16
7.5 Preparing the electrical connection.....	17
7.6 Mounting the Unit.....	18
7.7 Connecting the condensate drain.....	19
7.8 Connecting the Ductwork.....	20
7.9 Connecting Electrical Wiring and Control Interfaces.....	21
8. SPECIAL CONFIGURATIONS.....	22
8.1 Connecting a Dry Contact (CP Terminals).....	22
8.2 Independent control of the ERV side.....	23
9. STARTUP AND CONFIGURATION.....	23
9.1 Onboard Touch Controller Overview.....	23
9.2 Commissioning the unit.....	24
9.3 Commissioning Troubleshooting & Diagnostics	25
9.4 Error codes during commissioning.....	26
10. TESTING THE UNIT.....	26
11. SELF-CERTIFYING THE INSTALLATION.....	27
12. CUSTOMER HANDOFF.....	27
APPENDIX A – DIMENSIONS.....	27
A.1 Standard Configuration – Without Preheater....	27
A.2 Mirrored Configuration – Without Preheater....	28
A.3 Standard Configuration – With Preheater.....	29
A.4 Mirrored Configuration – With Preheater.....	30
APPENDIX B – WIRING DIAGRAM.....	31
APPENDIX C – WARRANTY.....	31
APPENDIX D – GLOSSARY.....	31
APPENDIX E – REVISION HISTORY.....	32

1. ABOUT THIS GUIDE

This guide outlines the procedures for safely installing the unit. Following these instructions reduces the risk of equipment damage, improper installation, and potential safety hazards.

Important: Read the installation guide and user guide in full before beginning any installation tasks. Pay close attention to all safety warnings and notices.

1.1 Specific language

Some language and symbols in this documentation have specific meanings.

Reference to the product

Any reference to “the unit” is meant to refer to the AIO™ Ceiling Ducted with ERV unit.

Unit orientation

All directions in this guide (left, right, top, and bottom) are given from the perspective of facing the unit.

Mirrored unit orientation

Units with the “-MR” suffix are built in a mirrored configuration. On these units, left and right components are reversed.

Bottom Service Panel

The panel on the underside of the unit, toward the rear, that protects and provides access to the fans, ERV core, and coils.

Electrical Cover Panel

The panel on the underside of the unit, near the supply air duct, that protects and provides access to the electrical compartment containing the terminals and connections.

Unless stated otherwise, this guide describes the standard unit. For mirrored units, reverse all left and right references.

Role definitions

This guide is primarily intended for installers. The roles of end users and service technicians are also defined here for reference.

- **User:** a non-expert who can safely operate the unit and perform basic diagnostics and maintenance.
- **Installer:** a trained and certified HVAC installation technician responsible for the correct installation of the unit as indicated in the installation guide and in accordance with all applicable local and national codes.
- **Service technician:** a trained and qualified HVAC professional who performs service or maintenance in compliance with Occupational Safety and Health Administration (OSHA) safety requirements, recognized industry best practices, and all applicable federal, state, and local codes and standards.
- **Trained HVAC technicians:** a group term for both installation and service technicians.

Illustrations and diagrams in this guide

All illustrations and diagrams in this guide show installations using Innova-approved accessories. Actual field installations may vary; additional components, adjustments, or modifications may be required to comply with project-specific requirements, applicable codes, and standards.

1.2 Safety notices, icons, and symbols

*Warnings, Cautions, and Attention*s are included throughout this guide. Read each carefully and follow the stated instructions.

Warning panels

The warning panels represent the level and immediacy of risk. Each warning panel displays a background color and a signal word.

Safety notices

Each Safety Notice represents the level and immediacy of risk. Each warning panel displays a background color and a signal word. They may include a pictogram to specify the topic.

DANGER

The red panel with the **DANGER** title indicates a hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

The orange panel with the **WARNING** title indicates a hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION

The yellow panel with the **CAUTION** title indicates a hazardous situation that, if not avoided, could result in minor to moderate injury or property damage.

Warning pictograms

Warning pictograms identify the type of hazard described in a safety notice.



The flame pictogram indicates information related to a fire or explosion hazard.



The lightning-bolt pictogram indicates information related to an electrical hazard.



The three vertical, S-shaped, parallel lines pictogram indicates information related to a hot surface hazard.

	The hand pictogram indicates information related to a moving part hazard, sharp-surface hazard, or pinch-point hazard.
	The slippery surface pictogram indicates information related to a slipping hazard.
	The exclamation mark pictogram indicates information related to a general hazard, including lifting, handling, environmental, installation, refrigerant contact, or property-damage hazards where no more specific pictogram applies.

Annotation icons

Annotation icons identify important installation, operation, or product information. It is essential to read each one carefully and follow the instructions stated.



The prohibition circle indicates a prohibited action or condition that could damage the unit, create an unsafe condition, or void the warranty.



The gear icon indicates critical information required for correct installation, commissioning, operation, or service.



The “i” in a circle indicates supplemental information, tips, or useful background information.

2. SAFETY GUIDELINES – READ BEFORE INSTALLING

This guide outlines the steps necessary to safely and securely install the AIO™ Ceiling Ducted with ERV unit. By following these instructions, installers can significantly reduce the risk of equipment damage, personal injury, and improper system operation.

The installer is responsible for ensuring that the unit is installed safely and securely, in full compliance with all applicable federal, national, state, and local codes and regulations. The precautions in this guide supplement, rather than replace, established safety practices. In case of conflicting precautions, always follow the more stringent requirement.

Only a trained and certified HVAC installation technician may install this unit.

Read the entire installation guide before installing the unit.

Follow all safety notices, warnings, and labels carefully. Failure to do so may result in property damage, serious injury, or death.

This section contains general safety notices for the unit. Because later sections refer back here, read this section in full before installing the unit.

2.1 Fire/explosion hazards

WARNING

- Do not store the unit in a room with continuously operating ignition sources (e.g., open flames, operating gas appliances, or electric heaters).
- Do not use any means to accelerate defrosting or clean the equipment other than those recommended by the manufacturer.
- In the event of abnormal conditions (such as a strange or burning smell, noise, or smoke), turn off the unit and disconnect it from its power source immediately. Report the issue

WARNING

immediately to your INNOVA representative or distributor.

- Servicing shall be performed only as recommended by the manufacturer.

2.2 Refrigerant hazards

DANGER

- Flammable refrigerant is used. Only qualified HVAC technicians are authorized to handle refrigerant charging, recovery, or disposal.
- Do not pierce or burn refrigerant copper tubing. Be aware that refrigerants may not contain an odor.
- Do not puncture the refrigerant copper tubing.
- Do not expose the refrigerant copper tubing to heat sources, sparks, or open flames.
- Do not use an open flame or high-heat sources for leak detection (for example, halogen lamps); fire or explosion can result. Only use approved electronic detectors when checking for refrigerant leaks.
- Refrigerant under pressure: Use appropriate personal protective equipment (PPE) and follow all applicable OSHA safety requirements when servicing or handling the unit.

WARNING

- Do not leave refrigerant cylinders in confined spaces; always store and use them in well-ventilated areas. Keep ventilation openings clear of obstruction.
- Do not charge, replace, or mix the R32 refrigerant with any other refrigerant type. Using other refrigerant types may damage equipment and pose safety risks.
- Do not install units utilizing flammable refrigerants in unventilated spaces unless the

WARNING

space is designed to prevent refrigerant concentrations from accumulating to levels that could create a fire or explosion in the event of a leak. Note that refrigerant leaks may be odorless and difficult to detect.

- Never store or transport refrigerant cylinders in temperatures above 122 °F (50 °C).
- During storage, protect cylinders and the unit from mechanical damage, tipping, or corrosion.

CAUTION

- Leak testing must be performed after installation is complete.
- This unit comes precharged with flammable refrigerant (R32). If the unit does not cool or heat, it may indicate a refrigerant leak. If a leak is detected, do not touch the unit. Ventilate the area, then immediately consult the building manager or the unit manufacturer. Refrigerants may cause cold burns.
- When handling the unit, verify that no other substance (including air) enters the refrigerant circuit other than the contained R32 refrigerant.
- Do not release refrigerant into the atmosphere; follow environmental regulations. In the US, refrigerant handling must comply with the EPA Clean Air Act Section 608 (certified personnel, recovery, reclaim, and recycling).
- Follow all local environmental regulations for refrigerant handling and disposal.

2.3 Hot surface hazards

DANGER

- Only trained HVAC technicians may access internal components while the system is hot.

DANGER

- Hot parts: do not operate the unit with the cover removed. Certain components (compressor, coils, discharge piping, and other parts) may reach high temperatures during operation.

CAUTION

- Allow sufficient time for surfaces to cool before handling or servicing. Contact with hot parts can cause burns or damage to equipment.
- Keep flammable materials away from hot surfaces at all times.
- Use appropriate PPE (such as gloves and protective clothing) when handling or working near hot components.

2.4 Electrical hazards

DANGER

- Employ a qualified electrician to perform all electrical wiring and connections. These must comply with the National Electrical Code (NEC) and any applicable state and local codes.
- Before installation, maintenance, or servicing, disconnect power to the entire system, including remote disconnects, peripherals, third-party devices, power backup systems, and other devices operating on the network, and turn off breakers or switches located remotely, such as at the fuse box.
- Follow all OSHA-compliant lockout/tagout (LOTO) procedures.
- Do not open access panels until the power has been fully disconnected.
- Do not tamper with or modify the unit, because this could create unsafe operating conditions.

WARNING

- A certified electrician must make all connections.
- Wiring and grounding must comply with the National Electrical Code (NEC) and all applicable state and local codes and regulations. Improper wiring or loose connections may cause overheating, fire, or electric shock.
- Connect only to a dedicated branch circuit of proper ampacity, protected by a correctly sized overcurrent device (per unit nameplate and wiring diagram).

CAUTION

- Follow OSHA-compliant Lockout/Tagout (LOTO) procedures.
- Use only standard circuit breakers and fuses rated for the unit.
- Do not use an extension cord or adapter plug, or connect multiple devices to a single outlet, as this may cause a fire or electric shock.
- Do not modify plugs or remove the grounding pin; always connect to a grounded 3-prong power supply.
- Do not bundle, pull, damage, or modify the power cord. Do not place heavy objects on it or heat sources on or near it, as this may cause a fire or electric shock.
- Do not operate the unit with damaged electrical cords or plugs. If the power cord is damaged, it must be replaced by the manufacturer or by a qualified electrician.
- Do not connect the ground wire to gas pipes, lightning rods, or telephone ground.
- Ensure electrical panels are closed and secured before energizing equipment.
- In the event of a blackout or thunderstorm, turn the unit off and disconnect it from the power source immediately.

2.5 Moving parts hazards

DANGER

- Moving parts: do not operate the equipment with panels, guards, or covers removed.
- Ensure power is disconnected and components have come to a complete stop before accessing the interior. Internal fans, motors, and other moving components may start automatically when power is supplied.

WARNING

- Keep hands, hair, tools, and loose clothing away from fans and moving components. Contact with moving parts can cause serious injury.
- Do not remove, bypass, or disable protective covers, guards, or safety interlocks.

CAUTION

- Only trained HVAC technicians are authorized to service the unit with the panels removed.
- Reinstall all panels before operation and keep your hands away from the fan area to prevent injury.

2.6 Handling and mechanical hazards

CAUTION

- Only a qualified HVAC professional may install this unit. The installer must be licensed, insured, or bonded, as required by state and local regulations.
- Protect control panel surfaces from being pressed with tools or sharp objects; use only your fingers to prevent damage.

CAUTION

- The unit is heavier on the right side (compressor side) and may be unbalanced when lifted.



Installation by anyone other than a trained and certified HVAC installation technician voids the unit's warranty.

CAUTION

- Edges inside the unit may be sharp; wear hand protection when handling sheet-metal parts to prevent cuts.

WARNING

- The AIO™ unit is packed with plastic materials that pose a suffocation risk to small children and infants. In addition, some packing materials may have sharp edges or parts that can cause injury.
- It is the installer's responsibility to remove all packing materials from the installation site and dispose of them properly, in accordance with all relevant regulations.

CAUTION

- The unit must remain upright at all times.
- Tipping the unit — whether on its side, back, or at an angle can damage the compressor welds, causing refrigerant leaks.
- The package must be transported upright. If it was not, notify your INNOVA representative or contractor immediately.

DANGER

- Disconnect all electrical power before making any electrical connections. This includes turning off breakers or switches located remotely, such as at the fuse box.
- Follow all OSHA-compliant lockout/tagout (LOTO) procedures.
- Employ a qualified electrician to perform all electrical wiring and connections. These must comply with the National Electrical Code (NEC) and any applicable state and local codes.
- Do not open access panels until the power has been fully disconnected.
- Do not tamper with or modify the unit, because this could create unsafe operating conditions.
- Use copper conductors only.

WARNING

The unit contains capacitors that may retain an electrical charge after the power is disconnected. To avoid electrical shock or serious injury:

- Wait at least 5 minutes after disconnecting power.
- Confirm that all indicator lights are off.
- Verify with a voltmeter that capacitors are fully discharged before service.
- Do not begin any servicing or disassembly until all conditions above are met.

WARNING

The AIO™ unit contains a pressurized refrigeration system:

- Do not puncture, heat, or incinerate the unit.
- The system contains refrigerant and refrigerant oil under high pressure. Before performing any service on the refrigeration

WARNING

system, the refrigerant must be safely recovered to relieve system pressure.

- The type of refrigerant used in this unit is listed on the unit's nameplate.
- Use only manufacturer-approved refrigerants and additives. Use of non-approved substances may damage the unit and void the warranty.
- If refrigerant gas leaks during installation, ventilate the area immediately. Refrigerants can produce toxic gases if exposed to fire or high heat.
- Do not use an extension cord to power the unit.

CAUTION

Make sure all louvers are either INNOVA-approved or comply with the specifications for required pressure drop and free area. Installation of louvers or grilles that do not meet these specifications may cause:

- Overheating of the unit.
- Water damage.
- Reduced performance.
- Voiding of the product warranty.

CAUTION

Install the unit in a location protected from impacts that could cause mechanical damage.

WARNING

This unit contains R-32 refrigerant, which is classified as A2L—low toxicity and mildly flammable. The following precautions must be followed:

WARNING

- Do not release R-32 into the atmosphere. It has a Global Warming Potential (GWP) of 675.
- Install the unit in a well-ventilated area to prevent refrigerant buildup.
- Take reasonable precautions to ensure the unit is not exposed to excessive heat.
- The use of leak detectors with halogen lamps is not allowed near R-32 systems.
- Make sure the room size matches the refrigerant charge. The refrigerant concentration must remain below the Refrigerant Concentration Limit (RCL) in case of a leak. For more information, refer to ASHRAE 15, ASHRAE 34, UL 60335-2-40, and applicable state and local codes.
- Use only mechanical connectors that comply with ASHRAE 15 (Safety Standard for Refrigeration Systems). Replace sealing components and, if connectors are reused, re-fabricate flared joints.
- If required, install a leak-detection system that detects refrigerant leaks and triggers ventilation or other safety responses.
- To prevent frostbite or other injuries, wear gloves and safety goggles when handling R-32.
- Store R-32 cylinders in a cool, ventilated space, away from heat sources, direct sunlight, or anything that could cause ignition.
- Attach R-32 cylinders securely to prevent them from shifting or being damaged.



The unit is designed for indoor installation only. Only the exterior intake and exhaust grilles are rated for outdoor exposure.



- The unit must be certified either by an INNOVA technician or through the approved self-certification process before use.
- If the unit is used without certification, the warranty will not be activated.
- If the unit operates for more than 30 days without certification, the warranty will be permanently void.
- It is the installer's responsibility to ensure that certification is completed.

2.7 Installation environment hazards

CAUTION

- Do not operate the unit in or near an environment under construction or renovation. Dust and debris can enter the unit, causing malfunctions and reduced performance.
- Do not install above an elevation of 8,858 ft (2,700 m) unless specifically approved by the manufacturer — reduced air density may impair safe operation.
- Indoor installation only. Do not install outdoors or in locations exposed to rain, snow, or direct weather.
- When working at heights, follow all applicable fall protection regulations and guidelines. Use guardrails, harnesses, and barricade the area below to protect against falling objects.
- Verify the supporting structure can carry the full unit weight and operating loads, including vibration and dynamic loads.
- Install using proper anchors and fasteners, and apply the correct torque.
- Keep the unit upright at all times; never lift it by its covers, panels, or refrigerant copper tubing.
- Protect the unit from impact, vibration, tipping, dust, and corrosive atmospheres during installation and operation.

⚠ CAUTION

- Do not install or store the unit in rooms with continuously operating ignition sources (e.g., open flames, gas appliances, or electric heaters).
- Maintain required service clearances and ensure ventilation openings remain unobstructed. Obstruction can cause malfunction or overheating.
- Dispose of all packaging materials safely to prevent suffocation, tripping hazards, or fire hazards.
- Follow all manufacturer instructions and applicable local building codes.

⚠ WARNING

- Improper installation environments can result in fire, explosion, refrigerant leakage, equipment damage, or personal injury.
- Do not operate the unit in or near an environment under construction or renovation. Dust and debris can enter the unit, causing malfunctions and reduced performance.
- If the unit must be operated during construction or renovation, the air filters and accessible coil surfaces must be inspected and cleaned daily before operation.
- Failure to perform daily cleaning during construction use may result in damage and will void the warranty.

⚠ CAUTION

- Units installed in coastal, shoreline, or saltwater environments must be ordered with factory-installed corrosion protection.
- Failure to use a factory-protected unit in such environments may result in accelerated corrosion and will void corrosion-related warranty coverage.

2.8 Installer responsibilities


- Install the unit safely and in accordance with all applicable local and national codes and regulations.
- Ensure that you fully understand the product and the installation procedures before beginning the installation. Installation activities involve greater risk than normal system operation.
- Provide the customer with the information necessary to operate the system safely after installation.

The safety precautions in this guide supplement recognized industry best practices. If a conflict occurs, follow the more stringent safety requirement.

3. AIO™ CEILING DUCTED WITH ERV OVERVIEW

3.1 Components and structure

Figure 2. What's Inside

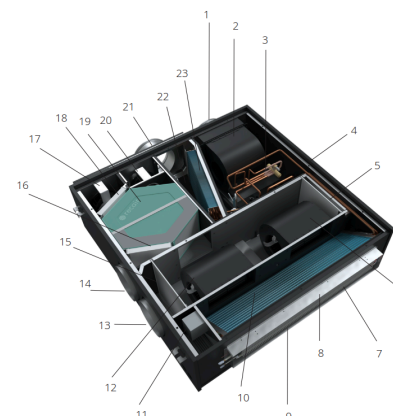

1	Condenser + stale air exhaust vent	13	Return air vent
2	Condenser + stale air exhaust fan	14	ERV stale air intake vent
3	Twin rotary inverter compressor	15	Return air filter
4	Return air connection	16	ERV filter
5	Return air filter	17	Fresh air ECM supply fan
6	ECM supply fan	18	ERV filter
7	900/1800W electric heat strip	19	ERV Hybrid Recovery Core
8	Supply air vent	20	Stale air ECM exhaust fan
9	Onboard touch controller	21	Condenser + fresh air intake vent
10	High-efficiency indoor coil	22	Condensate drain
11	Accessory Connection Block	23	High-efficiency outdoor coil
12	ECM supply fan		

- For exact dimensions, see [Appendix A](#).
- Units are supplied with standard side-return ports. Custom factory-built bottom-return units are available.

- Do not install the unit if the delivered configuration does not match your project submittals.
- For instructions on changing between side-return and bottom-return configurations, refer to [AIO™ Ceiling Ducted Switching Between Side and Bottom Returns \(v 5.0\)](#).



Component positions are mirrored in AIO™ Ceiling Ducted – Mirror Version units.



Do not install the unit if the delivered configuration does not match your project submittals.

3.2 Optional accessories

Use only factory-approved accessories to ensure optimal unit performance and preserve full warranty coverage.

Table 1. Optional accessories

Image	Name	SKU
	Bottom return conversion kit	AHRA0014
	GWN gateway (used to connect LTCH20 and TFTH20 controllers)	GWN
	GWX gateway (used to connect all controllers and BMS systems)	GWX-NC
	LTCH20 (basic touch) controller	LTCH20
	TFTH20 (advanced touch) controller	TFTH20
	Replacement ERV filters for AIO™ Ceiling Ducted units. MERV 13 equivalent (F7). Includes 2 filters.	AHRA0685

Image	Name	SKU
	Replacement MERV 3 return air filters for AIO™ Ceiling Ducted units. Includes 2 filters.	AHRA0687
	Thermoduct RLA8	RLA8

Compatible Louver Models

Table 2. Compatible Louver Models

Model Series	Configuration	Model Number	Submittal Link
LLA/F (Standard Flange)	Horizontal	LLA/F-H 8C ERV	LLA/F-H Sub...
	Extended (Left/Right)	LLA/F-E 8C ERV	LLA/F-E - LEF... LLA/F-E - RIG...
	Single	LLA/F-S 8W	LLA/F-S Sub...
LLA/C (Concealed Flange)	Horizontal	LLA/C-H 8C ERV	LLA/C-H Sub...
	Extended (Left/Right)	LLA/C-E 8C ERV	LLA/C-E - LE... LLA/C-E - RI...
	Single	LLA/C-S 8W	LLA/C-S Sub...
LLA/S (Surface Mounted)	Horizontal	LLA/S-H 8C ERV	LLA/S-H Sub...
	Single	LLA/S-S 8W	LLA/S-S Sub...


3.3 Unit Rating Plate

The Unit Rating Plate, attached to the bottom of the unit (see [Figure 3](#)), provides the model number, serial number, electrical specifications, factory refrigerant charge, and compliance markings.

Before installation, verify that the unit's rating plate, configuration, and accessories match the order and project documents. Do not rely on the external carton label alone.

If the unit, configuration, or accessories do not match the order or project documents, stop the installation and contact INNOVA Support or the project manager before proceeding.

Figure 3. Unit rating plate location

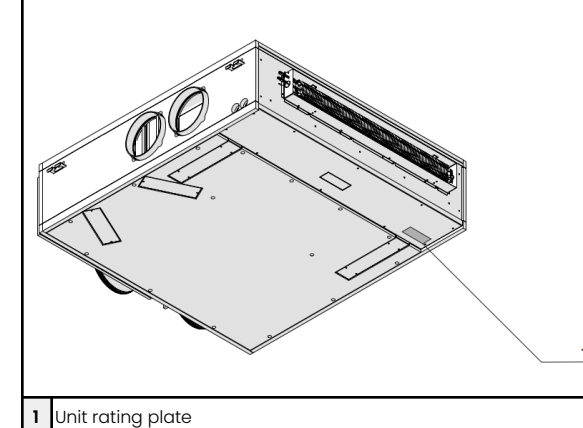

Do not remove or tamper with the rating plate. Doing so will void the product warranty.

4. RECEIVING, INSPECTING AND HANDLING THE UNIT

4.1 Shipping Configuration

The unit and mounting template are shipped in a single carton. Other accessories are shipped separately.

4.2 Carton Dimensions and Weight

The dimensions and total weight of the unit in the shipping carton are listed below:

Table 3. Carton dimensions and weight

Width	41.4" (1052 mm)
Height	11.0" (279.4 mm)
Depth for unit with preheater	52.2" (1327 mm)
Depth for unit without preheater	45.7" (1161 mm)
Maximum Weight	202.8 lb (92 kg)



The maximum weight shown includes the unit, installed electric heating components, and packaging. Actual packaged weight varies depending on the unit configuration. See the [product data sheet](#) for the individual component weights.

WARNING

- The unit is heavy and unbalanced.
- Always use a minimum of two people or a properly rated mechanical hoist when moving the unpacked unit.
- Only qualified personnel may operate cranes, hoists, forklifts, pallet jacks, mechanical lifts, or lifting platforms.
- Never lift the package by the cardboard or plastic wrapping.

WARNING

- Follow OSHA manual-lifting limits and the site lifting plan to prevent injury.
- When lifting the unit, do not exceed the [Recommended Weight Limit \(RWL\)](#) calculated using the Revised NIOSH Lifting Equation (RNLE).
- Comply with all applicable national and local regulations for heavy lifting.

4.3 Inspecting the Carton

1. Check the shipping label and purchase documents to confirm that the correct unit configuration was delivered.
2. Check the entire carton and pallet for visible signs of damage, such as crushed corners, punctures, or tears.
3. Take clear photos of any packaging defects.
4. Report the damage immediately.



Damage must be reported within two weeks of delivery to remain eligible for a claim.

4.4 Moving the Package

Before lifting the package:

1. Check the package weight.
2. Confirm that the lifting equipment is rated for the load.
3. Use a forklift, pallet jack, mechanical lift, hoist, or approved lifting platform to move the package around the job site or lift it into position.

CAUTION

- Do not rock, tilt, roll, or overturn the unit.
- Keep the unit horizontal and right side up at all times.

CAUTION

- If the unit was rocked, tilted, rolled, or overturned at any stage, allow the compressor oil to settle back into place by lying the unit horizontal and right side up for at least 24 hours before powering on. Notify your INNOVA representative or contractor before proceeding.
- Do not install a damaged unit. Damage to the unit can lead to water or refrigerant leakage, electrical faults, poor performance, and/or unsafe operation.
- If damage is found, stop installation and contact INNOVA Support or the project manager before proceeding.

4.4.1 Moving the package on a pallet:

When moving the unit while it is still secured to its shipping pallet, use a forklift or pallet jack.


Before lifting the package on a pallet:

1. Confirm that the package is secure on the pallet and that all straps are tight and properly closed.
2. Clear the travel path of people and obstructions.

To move the package on a pallet:

1. Slide the forks fully under the wooden pallet base rails.
2. Raise the pallet slowly and keep the package horizontal and right side up.
3. Drive slowly and take wide turns to avoid rocking the load.
4. Move the package as close to the installation location as possible before removing it from the pallet.
5. Lower the package gently and confirm that the package is stable before sliding the forks out.

Figure 4. Lifting with a pallet

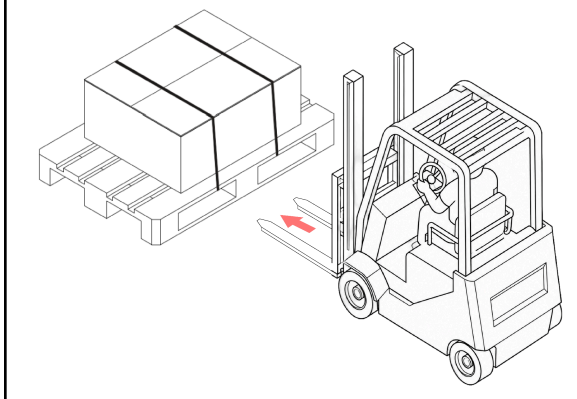

4.4.2 Moving the package without a pallet:

When moving the unit without a pallet, use a mechanical lift, hoist, or approved lifting platform.

Before lifting:

1. Identify the approved support areas.
2. Position straps, forks, or lift pads so they do not crush, bend, or scratch the unit.
3. Space straps, forks, or lift pads evenly to keep the package balanced and level.
4. Clear the travel path of people and obstructions.
5. Lift the package while keeping it horizontal and right side up.
6. Move the package as close to the installation location as possible.
7. Lower the package gently into position.
8. Confirm that the package is stable before removing the lifting equipment.

4.5 Storing the Unit

If the unit needs to be stored before installation, follow these rules to protect it from weather and job-site damage:

- Keep the unit in its packaging.
- Store the unit indoors in a closed, weather-protected area, away from possible damage.
- Keep the package off the ground on sleepers or a pallet.
- Maintain the storage temperature between 32°F and 104°F (0°C and 40°C).
- Check the package for the maximum number of stackable units.

4.6 Unpacking the Carton

Unpack the carton as close to the installation location as possible. This limits exposure to job-site dust and debris that can damage the unit.



CAUTION

- The unboxed chassis is heavy and sharp.
- To prevent injury, wear heavy-duty, cut-resistant, non-slip work gloves when handling the unit.

To unpack the carton:

1. Remove the staples from the carton.
2. Use a standard utility knife to cut the vertical corners of the carton. Ensure that the blade does not touch the cabinet casing.
3. Set your blade depth shallow and only cut the box corners.
4. Clear all plastic bags, wrapping, foam, and heavy staples out of the work area.

4.7 Inspect the Unit for Damage



- If the carton was damaged but the unit appears physically intact, test the unit in both heating and cooling modes before installation.
- Report any irregularities or operational issues to your INNOVA representative or distributor.

After unpacking and before installation, inspect the unit for:

- Damage to the cabinet, panels, mounting brackets, duct collars, or drain connections
- Damaged or missing insulation, fasteners, or other components
- Bent or crushed refrigerant tubing, oil residue, water intrusion, or corrosion
- Any other visible damage that could affect installation, operation, drainage, electrical safety, or service access

4.8 Inspect Internal Components

Before mounting the unit, inspect the internal components:


1. Open the Bottom Service Panel and Electrical Cover Panel.
2. Check that all components listed in Section 3 are:
 - Present
 - Firmly connected
 - Free of cracks, dents, bends, or visible damage
3. Spin the fan wheels by hand and confirm that they rotate freely.
4. Reinstall the Bottom Service Panel and Electrical Cover Panel after inspection.



If any component is missing, loose, or damaged, stop the installation and contact your INNOVA representative or distributor before mounting the unit.

4.9 Technical Layout Reference

Before lifting and mounting the unit, use the layout diagram below ([Figure 5](#)) to verify the exact locations of the electrical connections, suspension brackets, and condensate drain port.

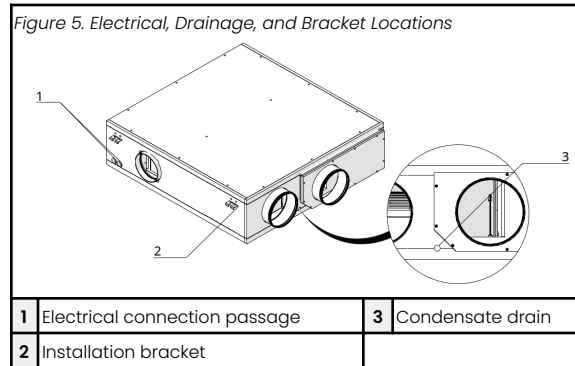

5. TOOLS AND MATERIALS NEEDED

Before installation, have the following available, as applicable:

- Appropriate PPE
- Approved lifting equipment rated for the unit weight. See the [product data sheet](#) for unit-weight specifications.
- AIO™ Ceiling Ducted installation template
- Ceiling support and mounting hardware specified in the project design, including:
 - Threaded rods
 - Anchors
 - Fasteners
 - Vibration isolation
- Solid (non-flexible) Ductwork, including:
 - Fittings
 - Supports
 - Insulation
 - Connectors
 - Clamps or collars
 - Sealant
- Condensate solution, including:
 - Short $\frac{3}{4}$ " PVC pipe stub (to connect to the P-trap/Air trap)
 - Flexible reducing coupling
 - Code-compliant P-trap/Air trap
 - $\frac{3}{4}$ " PVC drainpipe
 - Drainpipe supports
 - Drainpipe insulation
 - PVC joining materials
 - Coil-safe drain treatment
 - Freeze protection where required
- Power and control wiring and conduit
- Electrical disconnects
- All related electrical components sized according to the unit rating plate, wiring diagram, and applicable codes
- Standard installation tools
- Digital level

6. SITE REQUIREMENTS AND PREPARATION

Before installation, confirm that the site is prepared for:

- Unit suspension and required service clearances
- Supply, return, outdoor-air intake, exhaust-air, and stale-air ductwork
- Exterior intake and exhaust openings
- Condensate drainage
- Line-voltage power and a disconnecting means
- Control and communication wiring
- A false-ceiling access hatch

6.1 Pre-installation checklist

Before installing the unit, verify the following requirements.

6.1.1 Documentation and unit configuration

- ☐ Required INNOVA-approved installer training has been completed.
- ☐ Project drawings, approved submittals, unit labels, rating plate, wiring diagram, and this guide have been reviewed.
- ☐ The model, voltage, return-air configuration, and accessories match the project documents and unit rating plate. Stop work if any information does not match.
- ☐ The installation will comply with the NEC (ANSI/NFPA 70) and all applicable local codes and ordinances.

6.1.2 Unit and installation location

- ☐ The unit has been inspected for missing or damaged components, loose wiring, and obstructed fan wheels.
- ☐ The unit can be installed indoors in a level, horizontal position near the required exterior openings.
- ☐ The ceiling space is insulated against cold weather, with all insulation securely fastened so it

cannot loosen or be drawn into the unit's air openings.

- ☐ The location is protected from direct sunlight, moisture, corrosive conditions, heat sources, impact hazards, and flammable gases, vapors, or liquids.
- ☐ The installation complies with all R-32 refrigerant safety and minimum floor-area requirements.
- ☐ Factory coil protection or DiversiTech Coil Guard has been applied if the unit will be exposed to coastal, salt-air, chemical, or acidic conditions.
- ☐ The location will not amplify operating noise or direct supply airflow at a fixed bed, desk, workstation, or seating area.

6.1.3 Structure and site preparation

- ☐ A qualified professional has confirmed that the supporting structure can carry the 190 lb (86.2 kg) unit and all suspension, duct, vibration, operating, and service loads.
- ☐ Suspension and core-drilling locations are clear of concealed wiring, piping, drains, refrigerant lines, and structural elements.
- ☐ Duct routes and exterior openings are clear, accessible, and consistent with the project design. The planned condensate drain route allows a continuous downward slope of at least 2% (1/4 in. per ft [20.8 mm/m]), with the drain outlet above the maximum expected snow accumulation.
- ☐ Exhaust air cannot recirculate into the outdoor-air intake, and each exterior louver has at least 36 in. (914 mm) of unobstructed clearance.
- ☐ A dedicated branch circuit provides grounded, 60 Hz, single-phase power at the voltage specified on the unit rating plate and complies with the listed MCA and MOCP.
- ☐ The required disconnecting means and control or communication wiring are provided. Extension cords and adapters will not be used.

6.1.4 Service Access

- ☐ An access hatch has been installed in the ceiling.

- ☐ The access hatch clearances provide unobstructed access to the bottom service panel, electrical cover panel, filters, connections, and condensate drain.
- ☐ Service access has been verified before the ceiling or surrounding construction is closed.

6.2 Louver requirements

While the louvers mentioned in [Section 3.2](#) are highly recommended, using another louver solution is possible.

However, there are three critical factors when selecting and sizing a solution that works with AIO™ Ceiling Ducted units.

- **Air-path separation:** When a field-supplied louver or louver assembly serves both the outdoor-air intake and exhaust, provide a continuous, airtight, insulated separator between the intake and exhaust air paths. The separator must extend through the plenum to the exterior louver to prevent exhaust air from being drawn back into the intake. Exhaust-air recirculation can cause improper operation and unit short cycling.
- **Free area:** The area on a louver/grille that is open for the air to flow through. The louver, perforated panel, or other solution must have at least the amount of free area specified in the specifications below in the plenum from the unit, so that ample air can enter and exit the condenser chamber. A more restrictive solution with a smaller free area can be utilized by enlarging the louver and plenum until the required free area is achieved.



The minimum free area required is 0.34 square feet (0.03 square meters) for the intake vent and 0.34 square feet (0.03 square meters) for the exhaust vent.

- **Pressure drop:** Pressure drop is the resistance the louver/grille creates against the airflow. This resistance can create heat build-up inside the condenser portion, causing the compressor to overheat and shut down. A solution with a higher pressure drop than specified can be utilized by enlarging the louver and plenum until the pressure drop is within specification.



The combined pressure drop of the intake and exhaust air paths (including the louvers, grilles, plenums, and ductwork) must not exceed the project-specific maximum determined from the [fan curves](#).


- Any louver or louver assembly must meet these requirements. Exceeding these limits can cause the unit to overheat and fail. This will void the warranty.

6.3 Minimum clearance requirements

Maintain these unblocked clearance boundaries around the chassis for system airflow, vibration isolation, and service access:

- **Side Clearances:** Minimum 3.5 in. (88.9 mm) on all sides.


Figure 6. Side clearance zones

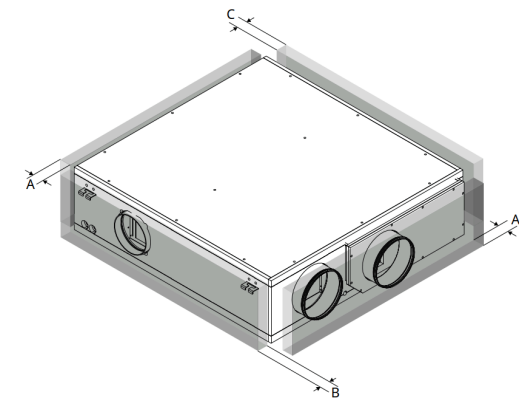

A, B, C - Minimum side clearances - 3.5" (88.9 mm)

- **Bottom Clearance:** Minimum 11.8" (300 mm) of clear workspace directly below the unit for inspection, service, panel removal, and maintenance.


Figure 7. Bottom clearance zone

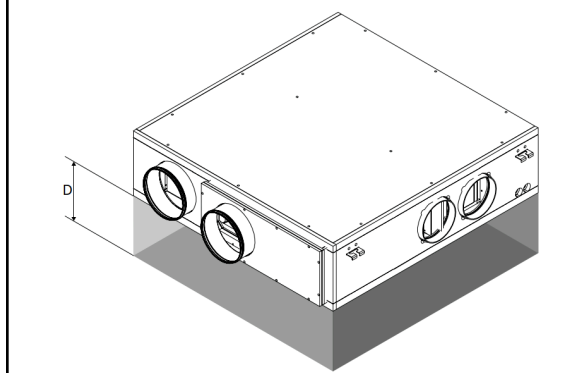

D - Minimum bottom clearance - 11.8" (299.7 mm)

- **False-Ceiling Access / Access Hatch:** For false-ceiling installations, provide an access hatch directly below the unit to allow qualified personnel to inspect, service, and maintain the unit without removing it from the ceiling.

Figure 8. Access Hatch dimensions

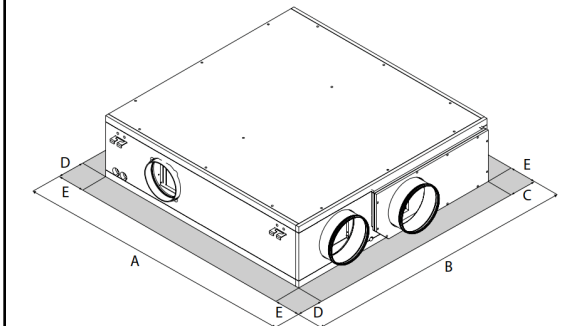

Minimum hatch dimensions		Unit without preheater	Unit with preheater
A	Inches (mm)	49.3 (1251)	55.8 (1417)
B	Inches (mm)	45.0 (1054)	45.0 (1054)
C	Inches (mm)	3.5 (90)	3.5 (90)
D	Inches (mm)	3.5 (90)	3.5 (90)
E	Inches (mm)	3.5 (90)	3.5 (90)

7. INSTALLING THE AIO™ CEILING DUCTED UNIT

[7.1 Installing Exterior Louvers or Vent Terminations](#)

[7.2 Affixing the Template to the Ceiling](#)

[7.3 Installing the Ceiling Support Hardware](#)

[7.4 Preparing a condensate drain](#)

[7.5 Preparing the electrical connection](#)

[7.6 Mounting the Unit](#)

[7.7 Connecting the condensate drain](#)

[7.8 Connecting the Ductwork](#)

[7.9 Connecting Electrical Wiring and Control Interfaces](#)

A qualified project professional must select the installation location based on the project design, this guide, and all applicable codes.

⚠ WARNING

- Verify that the ceiling support structure and all suspension hardware are rated by a qualified professional to safely carry the full unit weight, active operational vibrations, dynamic duct loads, and service loads.
- Never cut, drill into, or weaken load-bearing structural elements or building beams.
- Overhead installation creates an active falling object hazard. Securely block off, barricade, and clear the entire floor area beneath the active work zone to protect personnel and property from falling tools, hardware, or debris.

⚠ WARNING

Before drilling holes, mounting brackets, or conducting electrical work:

- Remove all flammable liquids, gases, and materials from the workspace to eliminate combustion risks.

⚠ WARNING

- Confirm that no other personnel are working in unventilated areas near the system.

⚠ CAUTION

The unboxed chassis is heavy and sharp. Always wear all required PPE (including heavy-duty gloves) when installing the unit.

7.1 Installing Exterior Louvers or Vent Terminations

Install the exterior louvers or vent terminations according to the project drawings, approved louver documentation, and applicable codes.

Before installation, check that:

- The exterior wall openings are clean and free of drilling debris.
- The intake and exhaust openings match the planned duct layout.
- The selected louvers or vent terminations are approved for the project.
- There are no obstructions in front of the intake or exhaust openings.
- The installation location meets all required clearances from other exhaust sources, air intakes, doors, windows, and property lines.

To install the exterior louvers or vent terminations:

1. Install the louvers or vent terminations according to the manufacturer's instructions.
2. Provide continuous flashing and weatherproof sealing at all exterior penetrations.
3. Seal all gaps between the wall opening, sleeve, duct, louver, or vent termination.
4. Make sure the installation prevents water intrusion into the wall assembly.
5. Make sure the intake and exhaust paths remain separated and unobstructed.

CAUTION

- Poorly sealed exterior openings can allow water, outside air, insulation, or debris to enter the building or duct system.
- Seal and weatherproof all exterior penetrations before operating the unit.

CAUTION

- Hand-tighten fasteners using appropriate manual tools unless a torque value is specifically provided.
- Over-tightening may damage panels, brackets, threaded components, or suspension hardware.

7.2 Affixing the Template to the Ceiling

Before beginning the installation, affix the template to the ceiling and mark the suspension anchor points.

To download the template as a PDF, click the link below:

 AIO Ceiling Ducted Installation Template (V 5.0).p...

To affix the template:

1. **Verify that you have downloaded and printed the correct template.**

If you are unsure, contact your distributor or INNOVA.

2. **Tape the template to the ceiling.**

- a. Position the template on the ceiling in the exact location you want to install the unit.
- b. Make sure the layout matches your planned ductwork runs.
- c. Make sure the front and rear faces of the unit correspond with the project drawings.
- d. Use painter's tape to affix the template to the ceiling
- e. Mark the suspension anchor points clearly.

7.3 Installing the Ceiling Support Hardware

Install the ceiling support hardware according to the project drawings, the anchor manufacturer's instructions, and all applicable codes.

7.4 Preparing a condensate drain

Before mounting the unit, prepare a route from the unit's condensate drain connection to one of the following:

- **Building drainage system (recommended):** Route the condensate to an approved indoor drainage location, such as a floor drain, laundry drain, or indirect waste receptor.
- **Direct outdoor discharge:** Route the condensate through an exterior wall to an approved outdoor discharge location.

CAUTION

Use direct outdoor discharge only when connection to a building drainage system is impractical. Discharged condensate may freeze or promote algae growth, creating a slipping hazard.

For all discharges:

Make sure the planned drain route:

- Accommodates a P-trap/Air trap installed within 6" (152 mm) of the unit drain connection.
- Allows the drain line to slope at least the required slope continuously (see [Section 7.7.2](#)) toward the drainage location.
- Provides sufficient space for the required vent riser and cleanout.
- Does not contain sags, rises, or other low points that could retain water.
- Is accessible for inspection and cleaning.

For direct outdoor discharge:

1. Prepare an opening through the exterior wall large enough for the drain line and its insulation.
2. Position the opening so that the completed drain line can maintain the required downward slope.
3. Make sure the drain will terminate above the maximum anticipated snow accumulation and in a location where discharged water will not create a hazard.

The building drainage connection and exterior wall penetration must comply with applicable plumbing and building codes.

Condensate drain options

A ¾ in. (19 mm) OD condensate drain connection is located on the rear panel of the unit between the outdoor air intake and exhaust connections. A ¾" ID PVC pipe of sufficient length must be attached to this connection to direct the condensate to an appropriate drainage system. This drainage system may include one of the following:

In-the-wall drain (recommended)

In this setup, the connection pipe connects to an indoor drainage system. This system can be (including but not limited to) a floor drain, laundry drain, or indirect waste.

- **Direct exterior drain**

In this configuration, the system conveys condensate directly to the exterior using the extended drain pipe, in accordance with applicable codes and drainage best practices.

- **Installation requirements:**

- The drainage relies on gravity only. For this reason, the PVC drain pipe must slope downward at least ¼" per foot (2%) along its entire length or more, depending on drainage location.
- Pipes running in or along exterior walls must be wrapped with self-regulating heat tape and insulated to prevent freezing.

CAUTION

Any portion of the condensate drain hose that may be exposed to warm, humid air should be insulated with closed-cell, vapor-impermeable insulation to prevent surface condensation. Uninsulated drain tubes may experience condensation due to the temperature differential between cold condensate and ambient room air, resulting in dripping water that can damage interior finishes and flooring.

To prepare an in-the-wall drain:

1. Install a drainpipe in the wall.

- Employ a qualified plumber.
- The drainpipe must have a minimum inner diameter of $\frac{3}{4}$ " (19.1 mm).
- If the drainpipe is routed via an external wall, wrap it in insulation and heat tape.

CAUTION

- Only use self-regulating heat tape or heat tape designed for use under insulation. Use of other types of heat tape may result in a fire and void the unit's warranty.

2. Test the drain.

- Pour water into the drainpipe.
- Check for leaks.

To prepare an external drain:

1. Drill a drain hole.

- a. Bore a drain hole through the exterior wall. The drain hole must have a downward slope toward the exterior of at least 3.6 inches per foot.
- b. Ensure that the drain hole and assembly allow for a downward slope of at least 3.6 inches per foot from the condensate drain under the AIO™ Ceiling Ducted unit.

- c. Additional drain protection can be provided by inserting a drain pipe into the drain hole and using it as a sleeve for the drain hose.

2. Insert the rubber drain hose through the drain hole or pipe.

3. Test the drain.

- a. Pour water into the drain pipe.
- b. Check for leaks.

7.5 Preparing the electrical connection

WARNING

- Only a qualified electrician may prepare the electrical connection.
- Follow all applicable codes and the instructions below. Incorrect wiring may result in electric shock, fire, serious injury, or death.

The AIO™ Ceiling Ducted unit does not include an attached power cord. The unit must be hardwired to the building power supply through a code-compliant junction box.

To prepare the hardwired connection:

1. Mount a junction box behind the unit.

- Install the junction box at the location marked 'POWER SUPPLY (OPTIONAL)' on the [installation template](#).
- Follow all applicable requirements for flush, surface, or recessed mounting.

2. Wire the junction box.

- Verify that power has been disconnected at the circuit breaker.
- Route the electrical cable from the breaker panel to the junction box. Make sure the cable is rated for the unit's electrical load. See the product data sheet for electrical specifications.
- Terminate the wires inside the junction box using listed connectors.
- Install the junction-box cover to maintain enclosure integrity.

3. Install a code-compliant disconnect switch.

- Use a double-pole disconnect for 230V units.
- Use a single-pole disconnect for 115V units that disconnects only the live (hot) wire.

4. Install surge protection.

- Connect the unit to a dedicated surge-protection device or a building-wide surge-protection system.
- Failure to provide surge protection may result in equipment damage and void the warranty.

CAUTION

- Do not connect the unit to a ground-fault circuit interrupter (GFCI) unless required by applicable codes. A GFCI may trip unnecessarily during normal unit operation.
- Contact INNOVA support if your local code requires this and you experience nuisance tripping.

7.6 Mounting the Unit

WARNING

- Never leave any factory suspension bracket or channel unsupported or unbolted during positioning.
- Keep personnel clear while the unit is raised into position. Do not work under the unit until it is fully supported and secured.

CAUTION

- Do not install the unit in a vertical orientation. Keep the unit horizontal and right side up at all times.
- Do not rock, tilt, roll, or overturn the unit during installation. If the unit was rocked, tilted, rolled, or overturned at any stage, lay it horizontal

⚠ CAUTION

and right side up for at least 24 hours before powering on to allow the compressor oil to settle back into place.

Before lifting the unit into place, confirm that:

- The ceiling anchors are fully installed, and the suspension hardware is rated for the unit weight and service loads.
- The threaded rods are straight, correctly positioned, and align precisely with the factory bracket channels.
- The work area directly below the unit is completely blocked off and clear of personnel.
- The unit orientation, service access boundaries, electrical connection side, and condensate drain location match the project drawings.
- The planned ductwork runs align with the unit's port configuration.

To mount the unit:

1. Using a mechanical lift, raise the unit horizontally into position against the interior ceiling structure
2. Mount the unit on the suspension rods using the pre-installed suspension brackets shown in Figures 9 and 10.
3. Use a digital level to confirm the unit is perfectly level with a slight pitch (of $\frac{1}{8}$ " per foot) towards the rear (to allow the unit to drain properly).
4. Adjust and tighten the hanging nuts.
5. Confirm that the unit is level and is supported evenly at all suspension points.

Figure 9. Suspension brackets and side orientation


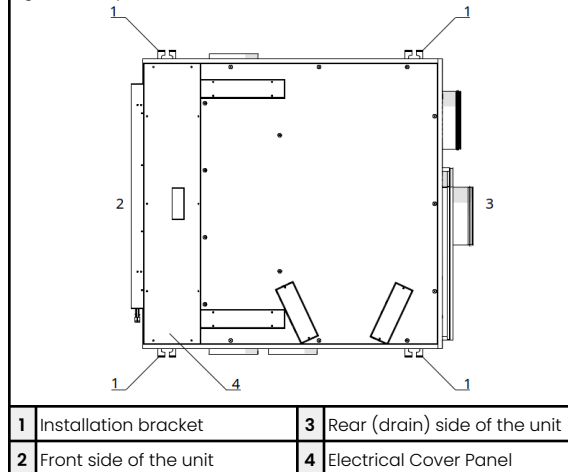


Figure 10. Suspension brackets - side view



7.7 Connecting the condensate drain

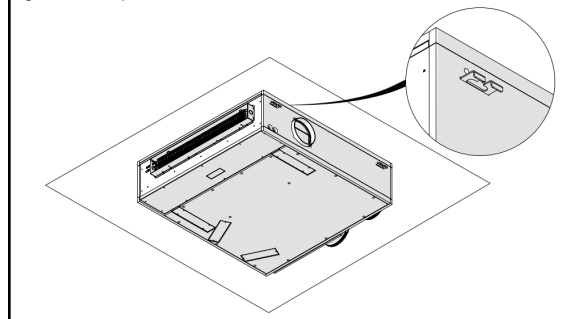


Perform this procedure only after the unit has been mounted.



The P-trap described in this section prevents the unit's negative pressure from drawing air through the condensate drain and interfering with drainage. A properly installed air trap (waterless condensate trap) that performs the same function may be used instead.

A $\frac{3}{4}$ " (19 mm) OD condensate drain connection is located on the rear panel of the unit between the outdoor intake and exhaust vents (see [Figure 11](#)).

Figure 11. Condensate drain connection location

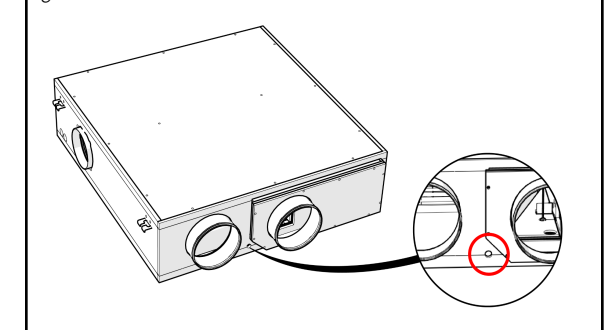

To create a condensate drain connection:

1. [Connect the unit and P-trap.](#)
2. [Route the drain line.](#)
3. [Insulate and protect the drain line.](#)
4. [Pre-treat the condensate drainage system.](#)
5. [Prime and test the drain.](#)


7.7.1 Connecting the unit and P-trap

Because the unit operates under negative pressure, a properly configured P-trap is required for condensate to drain correctly.

To connect the unit and P-trap:


1. Install a short $\frac{3}{4}$ " PVC pipe stub in the P-trap inlet using the joining method specified for the piping material.
2. Slide the smaller end of an appropriately sized flexible reducing coupling over the unit's condensate drain connection.
3. Slide the larger end of the coupling over the PVC pipe stub connected to the P-trap.
4. Position the coupling so that both the unit connection and PVC pipe are fully seated inside it.
5. Tighten the coupling's stainless-steel clamps to the coupling manufacturer's specified torque.
 - Do not overtighten the clamp on the unit connection.
 - Do not deform the connection or place stress on it.

Figure 12. Connecting PVC pipe to unit drain connection

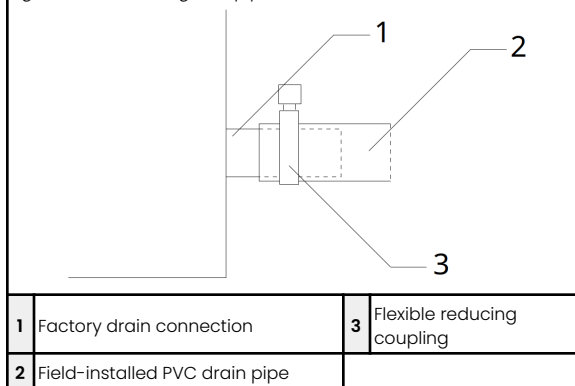

6. Install the P-trap within 6" (152 mm) of the unit drain connection and configure it to the dimensions shown in [Figure 13](#).
7. Install the required cleanout and vent riser downstream of the P-trap.
8. Make sure all connections are secure and watertight.

Figure 13. P-Trap Height Requirements

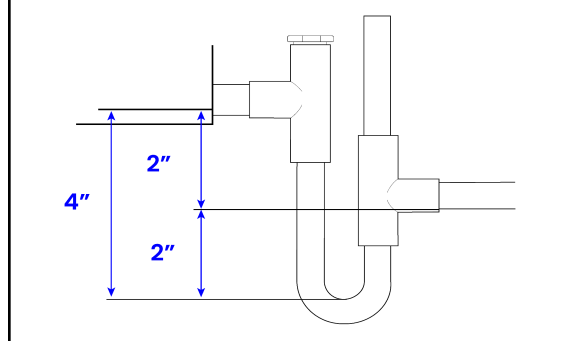

7.7.2 Routing the drain line

Route the drain line from the P-trap to the drainage location prepared in Section 7.3.

- For connection to a building drainage system, maintain a continuous downward slope of at least $\frac{1}{4}$ in. per foot (2% or 20.8 mm/m).
- For direct outdoor discharge, maintain a continuous downward slope of at least 3.6 in. per foot (30% or 300 mm/m).
- Do not allow the drain line to rise, sag, kink, or form an additional trap.
- Support the drain line at least every 5 ft (1.5 m).

Figure 14. Condensate drain slope


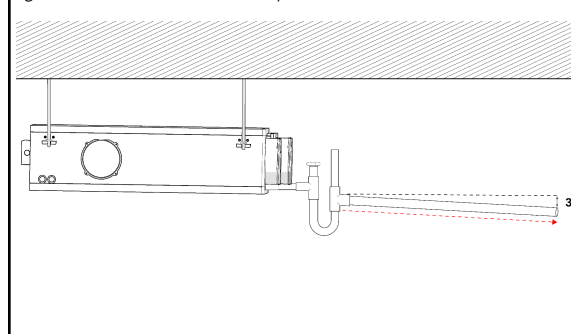


Figure 15. Condensate drain supports

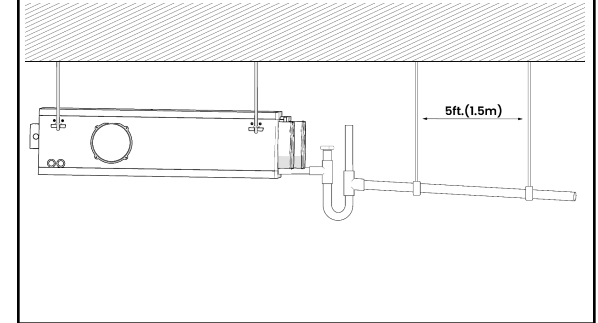

7.7.3 Insulating and protecting the drain line

Insulate the entire drain line with closed-cell, vapor-impermeable insulation. Extend the insulation to the unit drain connection.

Where any portion of the drain line may be exposed to freezing temperatures, install approved freeze protection.

WARNING

Only use self-regulating heat tape or heat tape designed for use under insulation. Use of other types of heat tape may cause a fire and could void your warranty.

7.7.4 Pre-treating the condensate drainage system

Before testing the drain, treat the drain pan, collection-box wells, and internal drain lines with a coil-safe drain treatment to help reduce biofilm growth. Apply the product according to the manufacturer's instructions.

Approved products include Nu-Calgon PowerZyme and Viper Pan & Drain Treatment, or an equivalent coil-safe product.

7.7.5 Priming and testing the drain

Prime the P-trap and verify that the completed drainage system drains properly without leaks.

1. Slowly pour enough clean water into the unit drain pan to fill the P-trap.
2. Continue pouring water and verify that:
 - Water drains freely.

- No water backs up into the unit.
- All connections are secure and leak-free.

7.8 Connecting the Ductwork

7.8.1 Duct Connection Requirements

Before connecting the ductwork:

1. Review Figures 16–18 and identify the function, airflow direction, and size of each duct connection.
2. Inspect all factory-installed duct collars. Make sure each collar is properly positioned, securely fastened, and free of gaps before installing any ductwork.
3. Correct any loose, damaged, or improperly installed collar before proceeding.

Once the collars have been located and inspected, connect the ductwork according to the project drawings and applicable codes, ensuring that the following requirements are met:

- Use properly sized rigid ductwork. Flexible ductwork is not recommended because it can sag, kink, restrict airflow, and increase static pressure.
- Size the outdoor air intake and exhaust duct systems so that each system does not exceed the available external static pressure at the required airflow (refer to the fan curves in [Appendix C](#)).
- Include the resistance of all ducts, fittings, dampers, louvers, and other components when calculating external static pressure.
- Insulate the ductwork with a continuous vapor barrier to prevent heat transfer and condensation.
- Seal all duct joints and penetrations against air leakage, including the insulation vapor-barrier seams.
- Support the ductwork independently. Do not allow its weight to rest on the unit or duct collars.
- Balance and commission the completed duct system in accordance with the project requirements.

CAUTION

Do not operate the unit with loose, damaged, or leaking duct connections. Air leakage can reduce performance, cause condensation, draw unfiltered air into the system, or allow exhaust air to re-enter the building.

7.8.2 Duct Connection Configuration and Dimensions


Use the following figures and tables to identify the location, airflow direction, and dimensions of each duct connection for the standard unit configuration.



The figures below only depict the standard unit configuration with return and fresh air intake on the sides. For a Ceiling Ducted unit with a bottom return configuration, both return and stale air intake vents are combined at the bottom of the unit. See the [Dimensions](#) section for a diagram.

Top View



Figure 16. Airflow port connections (top view)

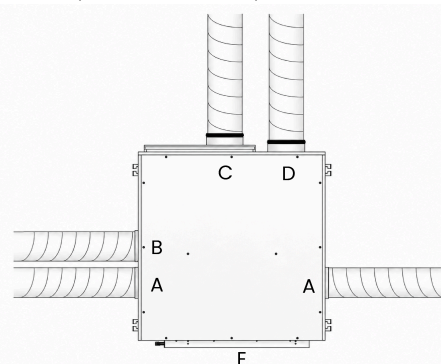

A Return air vent	D Outdoor air exhaust / ERV stale air exhaust
B ERV stale air intake	E Supply air vent
C Outdoor air intake / ERV fresh air intake	

Indoor Side

Figure 17. Airflow port connections (side view)

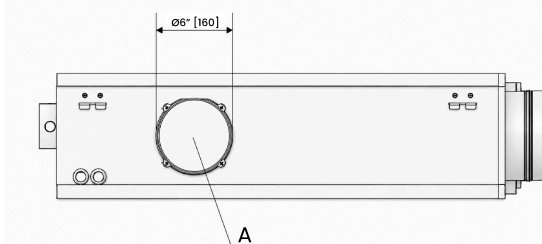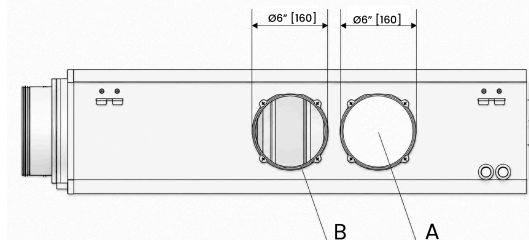

A Return air vent	B ERV stale air vent
--------------------------	-----------------------------

Indoor Vent Dimensions


- Air connection A: 6" (160 mm)
- Air connection B: 6" (160 mm)



The outdoor/stale air exhaust vent (D) WC may be ducted to a bathroom or other location, provided the duct system does not exceed 0.5" WC (124.4 Pa) external static pressure. To exhaust air through a duct leading to a bathroom exhaust, connect the stale air exhaust fan to the BOOST EXH terminal on the jumper board. This connection boosts the exhaust fan airflow to 80 CFM, allowing the fan to move air to the final exhaust location.

Outdoor Side

Figure 18. Outdoor Side

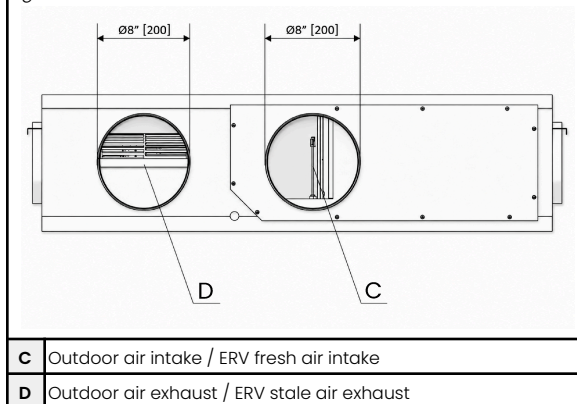

Outdoor Vent Dimensions

- Air connection C: 8" (200 mm)
- Air connection D: 8" (200 mm)

7.9 Connecting Electrical Wiring and Control Interfaces

DANGER

For safety and proper unit operation, do not make electrical connections to the unit until the AIO™ Ceiling Ducted unit has been mounted and the condensate drain and ductwork have been installed.

7.9.1 Electrical Safety Prerequisites

DANGER

- When the AIO™ Ceiling Ducted unit is in the OFF state, voltage may still be present at the electrical controls.
- Contact with live electrical parts will cause severe injury, shock, or electrocution.

DANGER

- Completely isolate the circuit and ensure zero voltage is present before removing the Bottom Service Panel or Electrical Cover Panel.

Before opening the Electrical Cover Panel or Bottom Service Panel, verify that:

- ☐ The entire system is powered off, including any remote breakers or switches at the fuse box.
- ☐ All remote disconnects, switches, peripherals, third-party controls, and backup power sources are disconnected.
- ☐ All OSHA-compliant Lockout/Tagout (LOTO) procedures have been completed.
- ☐ Absence of voltage has been verified with a voltmeter before touching any internal electrical components.


7.9.2 Accessing the Electrical Compartment

To hardwire the AIO™ Ceiling Ducted unit to the junction box, the electrical terminals must be accessed. These terminals are in a compartment located beneath the Electrical Cover Panel.

To open the Electrical Cover Panel:


1. Remove the 10 fixing screws on the Electrical Cover Panel.

Figure 19. Removing the Electrical Cover Panel Fixing Screws

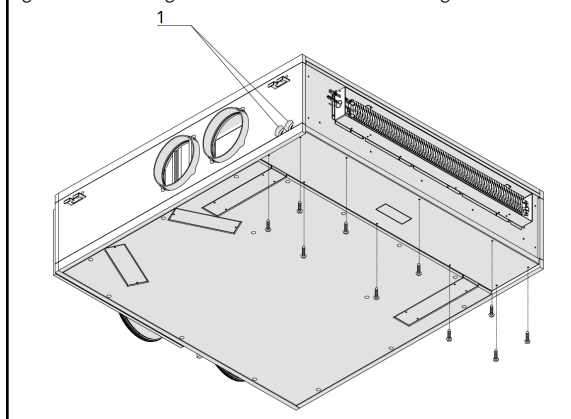

2. Remove the Electrical Cover Panel.

Figure 20. Removing the Electrical Cover Panel

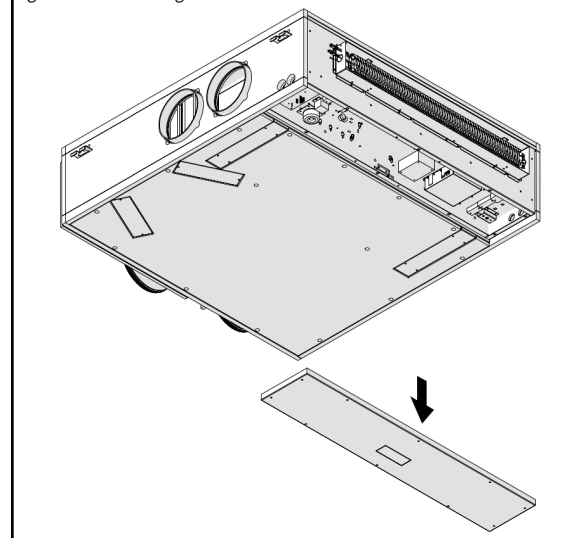

7.9.3 Connecting the power supply

Once the electrical compartment is accessed, the unit can be hardwired to the junction box. To hardwire the unit:

1. Refer to the terminals shown in the wiring diagram in [Appendix B](#) and in [Figure 21](#) below for the appropriate wiring locations.
2. In the wiring diagram, the unit power terminals are labeled L and N for both voltage configurations. Connect the power-supply conductors as shown in the following table:

Table 4.


Supply voltage	L terminal	N terminal
115 V	Hot	Neutral
230 V	L1	L2

3. Connect the equipment grounding conductor to the terminal marked with the ground symbol.
4. Secure all field wiring using listed strain-relief fittings.
5. Route and secure the wiring so that it cannot place stress on the terminals or become pinched,

damaged, or caught beneath the Electrical Cover Panel.

6. Reinstall the Electrical Cover Panel before energizing the unit.

Figure 21. Power supply and remote on-off wire layout

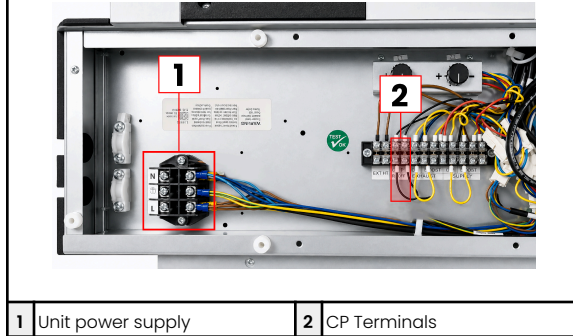

⚠ WARNING

- Do not energize the unit with the Electrical Cover Panel removed.
- Do not leave exposed conductors, loose wires, or unsecured wiring inside the electrical compartment.
- Do not start the unit until a licensed electrician checks and approves all electrical connections.

8. SPECIAL CONFIGURATIONS

8.1 Connecting a Dry Contact (CP Terminals)

The Ceiling Ducted with ERV unit supports integration with dry contact devices (voltage-free switch inputs used to control unit operation), such as:

- Remote on/off controls
- Occupancy sensors
- Hotel key-card switches
- Open-window switches
- Fire alarm interfaces

When the dry contact connected to the CP input opens, the unit turns off automatically, the display locks out manual control, and the symbol flashes on the onboard touch controller display. This indicates that the system is locked out by an external device.

⚠ WARNING

The CP terminals are designed for voltage-free dry contact only.

- Do not connect 115 V or 230 V line voltage to the CP terminals.
- Do not splice or connect the CP input in parallel with other control boards.
- Do not use shared control voltage on the CP input.
 - Use separate, isolated relay contacts for each unit or control device.
 - Line voltage can damage the control board, create a fire or electric shock hazard, and void warranty coverage.



To minimize electrical interference, use solid conductor wire for runs of up to 30 ft (9.14m). For longer runs up to project limits, use shielded solid four-conductor 18 AWG cable.


To install a dry-contact interface:

1. **Prepare the system and circuit enclosure**
 - a. Power off and disconnect the power supply, and lock out/tag out the branch circuit.
 - b. Wait at least 5 minutes and test with a voltmeter to verify zero voltage is present.
 - c. Carefully open the Electrical Cover Panel (see Figures 19 and 20).
2. **Terminate and secure the interface wiring:**
 - a. Connect the dry contact device wiring directly to the CP terminals as shown in Figure 21.
 - b. Secure the wiring so it cannot pull on the terminal block or control board.
 - c. Reinstall the Electrical Cover Panel before powering on the unit.
3. **Test the dry contact operation and display**
 - a. Reconnect the power supply and energize the unit.
 - b. Activate and deactivate the connected dry contact device.
 - c. After testing, reinstall the Electrical Cover Panel.

8.2 Independent control of the ERV side


By default, ERV fans operate in relation to the unit supply fan. When independent control is enabled, the ERV fans are controlled directly by the potentiometer and no longer follow the unit control logic.

Figure 22. ERV fan potentiometer

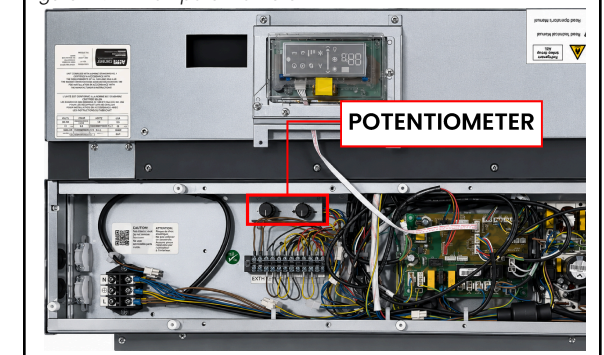

To enable independent control:

1. Disconnect power to the unit and wait at least five minutes before accessing the electrical components.
2. Refer to [Figure 23](#) and identify the following connections:
 - ERV supply and exhaust fan connections
 - Potentiometer-controlled terminals marked TR SUP FAN and TR EXH FAN
 - Unit-controlled terminals marked AUTO FAN ERV CONTROL TRIMMER SWITCH
3. Disconnect the ERV supply fan wires from the unit-controlled terminals and connect them to TR SUP FAN
4. Disconnect the ERV exhaust fan wires from the unit-controlled terminals and connect them to TR EXH FAN.
5. Verify that all connections are secure before restoring power to the unit.

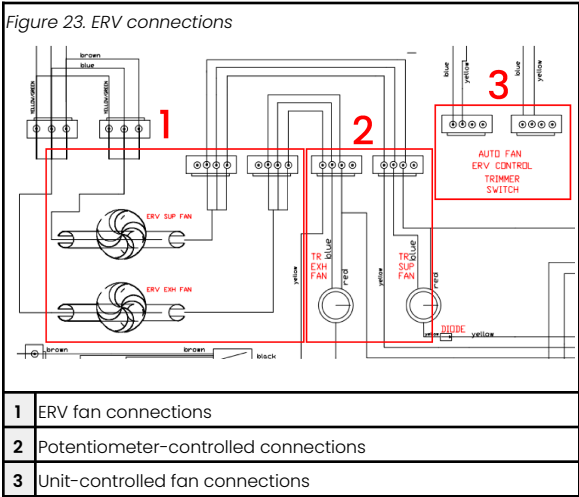

9. STARTUP AND CONFIGURATION


⚠ WARNING

- When the AIO™ Ceiling Ducted with ERV unit is powered off, voltage may still be present at the electrical controls. To avoid electric shock or damage to the unit, disconnect the power supply before opening or servicing the unit. Unplug the power supply cord from the outlet or turn off the circuit breaker and/or remove the fuse.

After the unit has been physically installed and electrically connected, it must be started up and commissioned before it is ready for use. This chapter covers the initial power-on procedure, system verification, menu configuration, and Wi-Fi setup.

9.1 Onboard Touch Controller Overview

The onboard touch controller (see [Figure 24](#)) is located underneath the unit. Use the controller to change settings, select airflow programs, and run testing cycles.

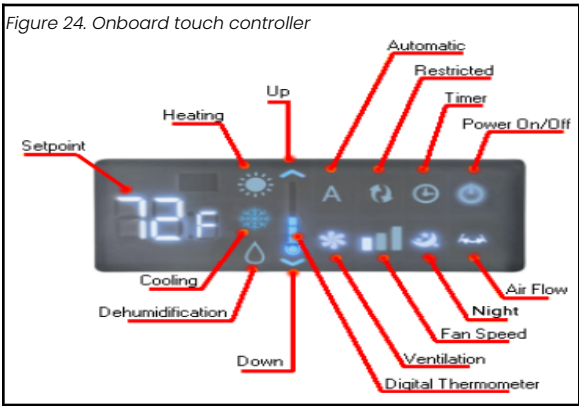

The following tables contain a brief description of the keys used during commissioning:

Key	Description
Up arrow	Increases setpoint temperature; scrolls upward through menu items
Down arrow	Decreases setpoint temperature; scrolls down through menu items
Fan speed	Cycles through fan speed levels (for example: Low, Medium, High, and Auto)
Mode	Cycles through operating modes (Heating, Cooling, Dehumidification, Fan Only, and Auto)
Timer	Sets the auto-off timer
Night	Activates or deactivates Night mode
A (Auto / Alert)	Used for Auto temperature changeover, menu access, and displaying active alerts
Power	Turns the unit on or off; used for menu access and confirmation

The order and content of menu items may vary depending on the installed firmware (FW) version. Always verify the firmware version before making configuration changes.

9.2 Commissioning the unit

To commission the unit, follow the steps below:

1. [Power on the unit.](#)
2. [Check basic unit operation.](#)
3. [Check fan speed operation.](#)
4. [Configure the unit airflow settings.](#)
5. [Configure the ERV airflow settings.](#)
6. [Ensure the unit is air-balanced.](#)
7. [For units with electric heaters only: Configure the unit's electric heaters.](#)

9.2.1 Powering on the unit

When powering on the unit for the first time:

1. Turn on the disconnect switch and circuit breaker.
2. Press the **Power On/Off key** () on the Onboard Touch Controller. The screen will light up, and the unit will enter standby mode.
3. Check the display:
 - If the display operates normally, continue with the commissioning procedures below.

- If an error code or the CP lockout appears, do not continue commissioning until the condition has been resolved. See [Section 9.3](#) or contact INNOVA support.

9.2.2 Checking basic unit operation

Operate the unit in Cooling, Heating, and Fan-only modes. In each mode, verify that the unit starts, operates without abnormal noise or vibration, and produces the expected airflow and discharge-air temperature.

9.2.3 Checking fan speed operation

The supply fan speed can be adjusted from the Onboard Touch Controller while the unit is operating in Fan-only, Cooling, Heating, or Auto mode.



In Dehumidify mode, the unit controls fan operation automatically.

To check fan speed operation:

1. Make sure the unit is operating.
2. Press the **Fan Speed key** () to cycle between fan speeds (Low, Medium, High, and Auto).
3. Verify that the fan responds correctly at each setting.

9.2.4 Configuring the unit airflow settings

Correct airflow is required for proper unit operation and capacity. During commissioning, select the airflow program appropriate for the external static pressure of the installed duct systems.

The unit provides eight airflow programs. Each program establishes the indoor and outdoor fan settings shown in the following table.

Table 5. Indoor and outdoor fan settings

Program	Description	Indoor Side	Available Indoor Pressure (in. WC / Pa)	Outdoor Side	Available Outdoor Pressure (in. WC / Pa)
P1	IN LOW / OUT LOW	LOW	0.1 / 25	LOW	0.1 / 25
P2	IN MED / OUT LOW	MED	0.3 / 75	LOW	0.1 / 25
P3	IN HIGH /	HIGH	0.5 / 125	LOW	0.1 / 25

Program	Description	Indoor Side	Available Indoor Pressure (in. WC / Pa)	Outdoor Side	Available Outdoor Pressure (in. WC / Pa)
	OUT LOW				
P4	IN LOW / OUT MED	LOW	0.1 / 25	MED	0.3 / 75
P5	IN MED / OUT MED	MED	0.3 / 75	MED	0.3 / 75
P6	IN HIGH / OUT MED	HIGH	0.5 / 125	MED	0.3 / 75
P7	IN LOW / OUT HIGH	LOW	0.1 / 25	HIGH	0.5 / 125
P8	IN HIGH / OUT HIGH	HIGH	0.5 / 125	HIGH	0.5 / 125



Programs P5 and P6 are suitable for most applications. For bathroom-exhaust applications, use P8 unless the project airflow calculations or balancing results require a different setting.

To select an airflow program:

1. On the onboard touch controller, press and hold the **Fan Speed key** () button until P1 flashes on the display.
2. Select the desired program using the **up and down arrows** ().
3. Release the key and wait for the controller to save the selection and exit the menu automatically.
4. During system balancing, verify that the selected program provides the required airflow.

9.2.5 Configuring the ERV airflow settings

- Units equipped with an ERV require ventilation airflow adjustment during commissioning to establish the correct air exchange rate for indoor air quality and occupant comfort.
- The ERV fans control the amount of outdoor air brought into the system. The supply fan distributes that air through the ductwork.
- The ERV fan speed is controlled using the trimmer kit (potentiometer – see [Figure 22](#)), which sets the ventilation airflow rate.

To adjust ERV airflow:

1. Locate the potentiometers in the Electrical Compartment (see [Figure 22](#)).
2. Rotate the adjustment knobs to increase or decrease airflow until the specific target ventilation airflow is reached.

After adjusting the ERV airflow with the potentiometers:

1. Measure the incoming outdoor, indoor return, and outdoor exhaust airflows.
2. Check that all airflow measurements match project specs.

9.2.6 Ensuring the unit is air-balanced

- All units must be properly air-balanced by a qualified air-balancing professional.
- Air balancing must be performed after installation and before final commissioning.
- A formal air balancing report must be completed and made available.
- Failure to perform air balancing properly may result in poor performance, system issues, and voiding of the warranty.

9.2.7 For units with electric heaters only: Configuring the unit's electric heaters

In cold climates where outdoor temperatures drop below freezing, configure units with supplemental electric heat to use electric resistance heating. This improves heat pump operation in extreme low ambient conditions and helps stop ice formation on the outdoor coil.

CAUTION

- Do not activate the low-ambient resistance-heat setting on standard Heat Pump Only models (Version code P). The following procedure applies only to units factory-equipped with supplemental electric heat strips (Version codes K or E).

To configure low ambient resistance heat mode:

1. [Power on the unit.](#)
2. Press and hold the Heating icon (☀) for 10 seconds until "Fh" appears on the display.
3. Press and hold the Heating icon (☀) again for 5–10 seconds until "Fo" appears on the display.
4. Press and hold the Heating icon (☀) a third time for 5–10 seconds until "rE" (resistance heat mode) appears on the display.
5. Release the key and wait for the menu to automatically save and exit.

9.2.8 Configuring the unit for a bottom-ducted return

While the Ceiling Ducted unit can work both with a side or a bottom return, the unit comes factory-configured for a side return. To view the instructions to convert the unit to a bottom return, click the link below:

 [AIO Ceiling Ducted Switching Between Side and ...](#)

9.3 Commissioning Troubleshooting & Diagnostics

Use the following table to identify and resolve common issues that may arise during the commissioning process.

Table 6. Commissioning Troubleshooting & Diagnostics

Issue	Possible cause	Corrective action
Any fault occurs during commissioning	Installation or commissioning issue	Power off the unit and disconnect power before removing the Bottom Service Panel or Electrical Cover Panel. Verify that all installation, wiring, drainage, ductwork, and commissioning procedures have been completed correctly.
Onboard Touch Controller display is off	Power is not supplied to the unit.	Verify that building power is available at the unit.
	The circuit breaker has tripped.	Reset the circuit breaker. If it trips again, stop troubleshooting and contact INNOVA Support or a qualified service technician.

Issue	Possible cause	Corrective action
	The disconnect switch is OFF.	Turn the disconnect switch ON.
	The unit fuse is blown.	Have a qualified service technician inspect the unit and replace the fuse, if necessary.
	Control wiring is loose or connected incorrectly.	Verify that the control wiring is secure and connected correctly.
Unit does not turn on	Building voltage is not present at the unit.	Verify that the supply voltage is present and matches the unit nameplate.
	The circuit breaker or disconnect switch is OFF.	Turn on the circuit breaker and disconnect switch.
	The CP remote on/off contact is open.	If the CP input is used, close the remote on/off contact.
No communication with the Onboard Touch Controller	The display cable is loose or disconnected.	Verify that the display cable is securely connected.
	RS485 or control-wiring polarity is incorrect.	Verify and correct the wiring polarity.
	Communication wiring is damaged.	Inspect the wiring and replace any damaged sections.
Low airflow during commissioning	Communication wiring is routed too close to power wiring.	Separate communication wiring from power wiring as required.
	Filters are dirty or installed incorrectly.	Clean or replace the filters and reinstall them correctly.
	Ductwork is blocked, crushed, kinked, or otherwise restricted.	Remove the restriction or repair the affected ductwork.
	Supply, return, intake, or exhaust openings are obstructed.	Clear all airflow openings.
	Duct connections are loose or leaking.	Secure and seal all duct connections.
	The incorrect airflow program is selected.	Select the airflow program appropriate for the installed duct system and required external static pressure.
	The system has not been air-balanced.	Have a qualified testing, adjusting, and balancing

Issue	Possible cause	Corrective action
		professional balance the system.
Condensate does not drain.	The condensate drain line does not have the required continuous downward slope.	Correct the drain-line routing and slope.
	The P-trap/Air trap is missing, incorrectly installed, or not primed.	Install the P-trap/Air trap correctly and prime it with water.
	The drain line is blocked, kinked, sagging, trapped, or routed with low points.	Clear the blockage or correct the drain-line routing.
	A drain joint is loose or leaking.	Secure and seal the affected joint.
	Water does not drain freely during the commissioning drain test.	Correct the drainage issue and repeat the drain test before operating the unit.

If an issue cannot be resolved using this table, stop troubleshooting and contact INNOVA Support.

9.4 Error codes during commissioning

If an error code appears during commissioning, record the code and check the related item below.

Table 7. Error codes during commissioning

Code	Meaning	Commissioning check
E1	Room temperature sensor fault	Check sensor connection.
E2	Indoor coil / IPT sensor fault	Check sensor connection.
E3	Outdoor air temperature sensor fault	Check sensor connection.
E4	Outdoor coil / OPT sensor fault	Check sensor connection.
E5	Indoor fan motor fault	Check fan wiring and obstruction.
E6	Outdoor/condenser fan motor fault	Check fan wiring and obstruction.
E7	Fault between the main controller board and the controller.	Check onboard touch controller display and communication wiring.

Code	Meaning	Commissioning check
E8	Compressor discharge sensor fault	Check sensor connection.
CP	CP remote on/off contact open	Verify CP contact is closed or correctly wired.

If the code does not clear after checking the installation-related items, stop commissioning and contact INNOVA Support or a qualified service technician.

10. TESTING THE UNIT

After completing the installation and commissioning procedures, test the heat pump and ERV to verify proper operation before leaving the job site.

To test the unit:

1. Before energizing the unit, verify that the supply voltage is within the unit's specified operating range and that the unit is properly grounded.
2. Turn on the unit, select Cooling mode, and set the controller to its lowest temperature setting. Verify that cool air discharges from the supply grille.
3. Operate the unit continuously in Cooling mode for 20 minutes. During this period:
 - Verify that condensate flows freely through the drainage system and that all drain connections are leak-free.
 - Measure and record the operating voltage and running current. Verify the measurements against the applicable unit electrical specifications.
4. Select Heating mode and set the controller to its highest temperature setting. Verify that warm air discharges from the supply grille.
5. Cycle through the Low, Medium, High, and Auto fan-speed settings. Verify that the supply fan responds correctly at each setting.
6. For units equipped with an ERV, verify that the outdoor air intake and exhaust fans operate correctly and that the required ventilation airflows have been achieved.
7. If an optional wall-mounted controller, such as the LTCH20 or TFTH20, is installed, use the controller to verify proper communication and operation.
8. Verify that the supply, return, outdoor air intake, and exhaust openings are free of obstructions, including drapes, furniture, construction debris, and structural elements.
9. After completing all operational, drainage, and electrical checks, continue with [Section 11](#).

11. SELF-CERTIFYING THE INSTALLATION

Before handing the unit over to the customer, complete the steps in the [AIO™ Ceiling Ducted Unit Self-Certification Guide](#) and submit the required photographs to INNOVA. (If you need the Self-Certification Guide, contact INNOVA support.) INNOVA must review and approve the installation before the warranty can be activated.

12. CUSTOMER HANDOFF

After commissioning and self-certifying the unit, perform the following final steps:

- Explain the following to the customer:
 - Basic unit operation.
 - How to use the onboard and/ or wall controller.
 - How to identify alarms or error codes.
 - Routine maintenance requirements.
 - Filter cleaning or replacement requirements.
 - When to contact a qualified service technician.
- Make sure that the customer has all the required documentation ([user guide](#) and [troubleshooting manual](#)).
- If the unit is installed in a salty, chemical, or acidic environment, apply a protective coil coating, such as DiversiTech Coil Guard, to protect the coil surfaces from corrosion and ensure long-term performance.
- If the unit is installed on a construction site, protect it with tight plastic wrap and do not operate it until all dust and debris in the air have been removed.
- Remove all packaging materials and wipe off any dust or debris from the unit using a damp cloth.

APPENDIX A – DIMENSIONS

A.1 Standard Configuration – Without Preheater

To view the dimensions as a high-resolution PDF, click the link below:

[AIO Ceiling Ducted with ERV Dimensions \(v 5.0\).p...](#)

Figure 25. Unit Dimensions

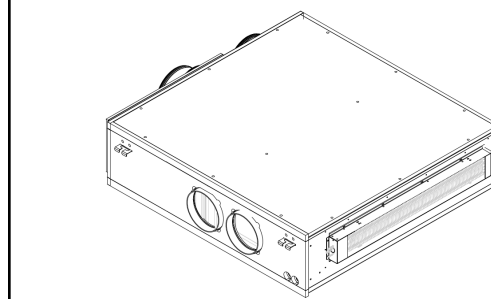


Figure 26. Unit Dimensions (Top view)

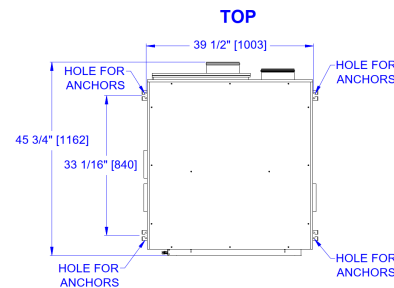


Figure 27. Unit Dimensions (Left View)

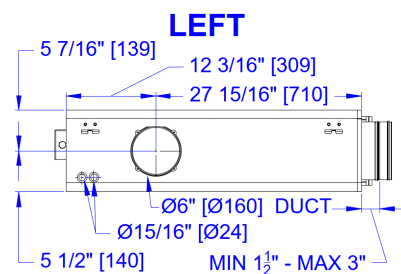


Figure 28. Unit Dimensions (Front View)

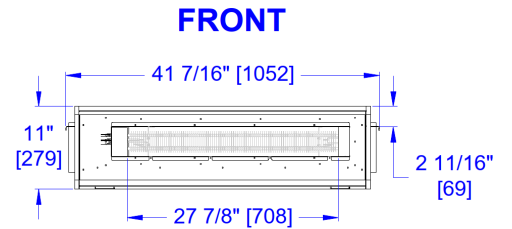


Figure 29. Unit Dimensions (Right View)

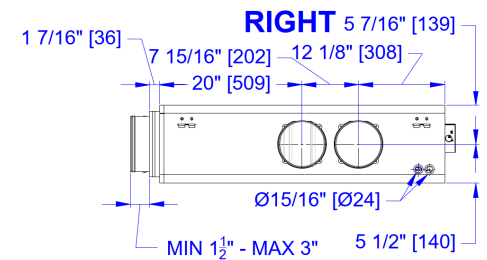


Figure 30. Unit Dimensions (Bottom View)


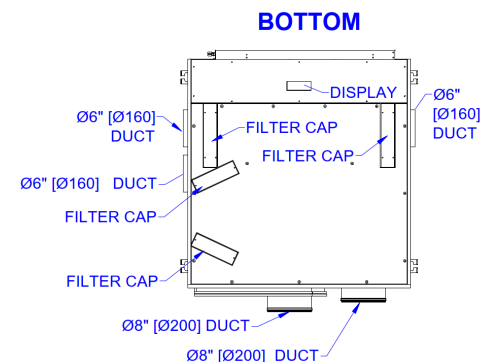









Figure 31. Unit Dimensions (Rear View)

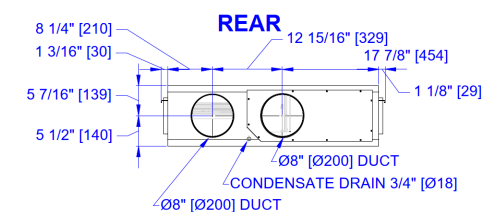

A.2 Mirrored Configuration - Without Preheater

To view the dimensions as a high-resolution PDF, click the link below:

[AIO Ceiling Ducted \(Mirror Version Gen 3\) Dimens...](#)

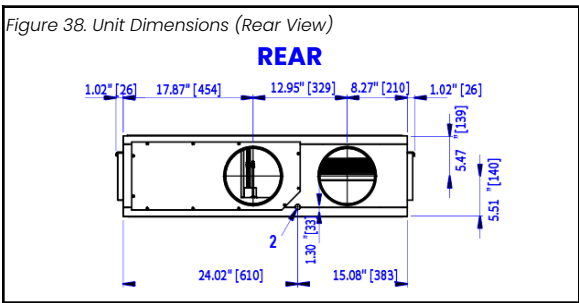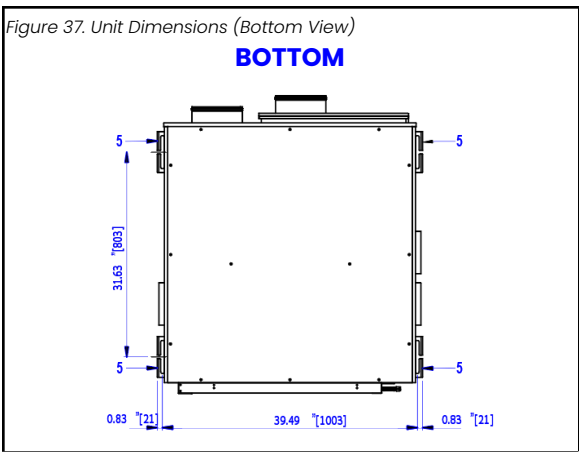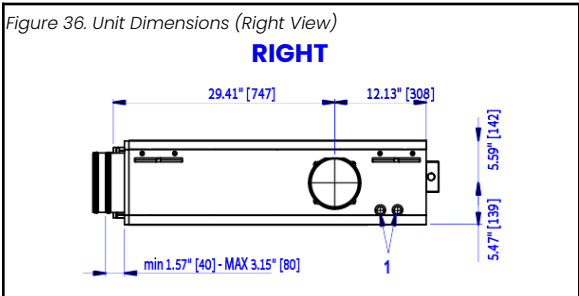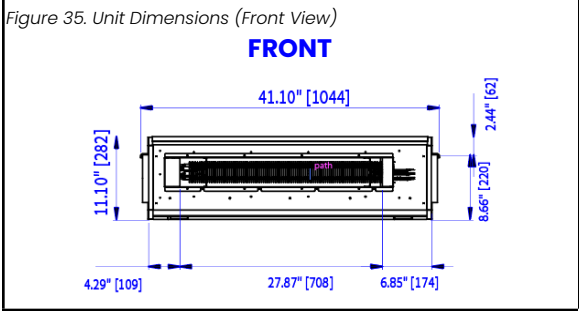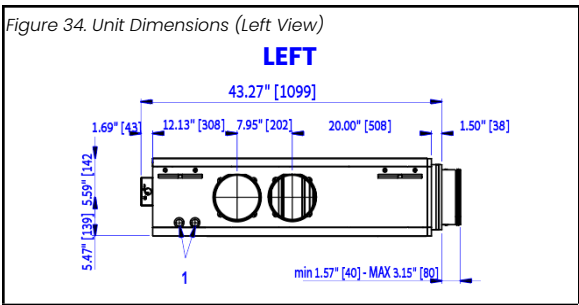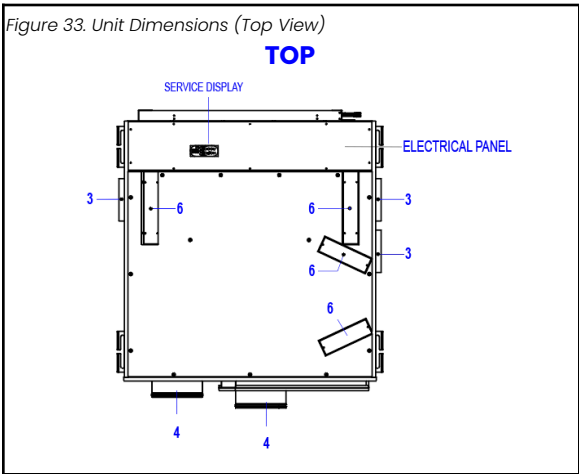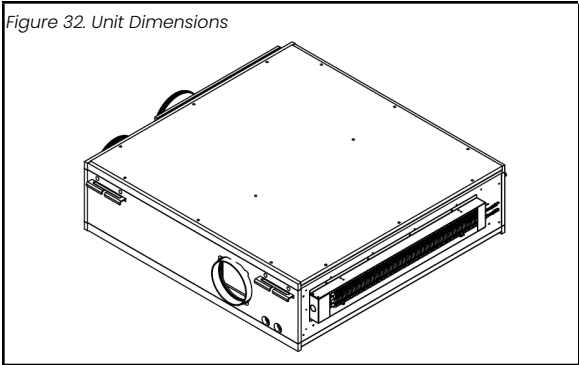

A.3 Standard Configuration - With Preheater

To view the dimensions as a high-resolution PDF, click the link below:

[AIO Ceiling Ducted with ERV \(Gen 3\) and Preheat...](#)

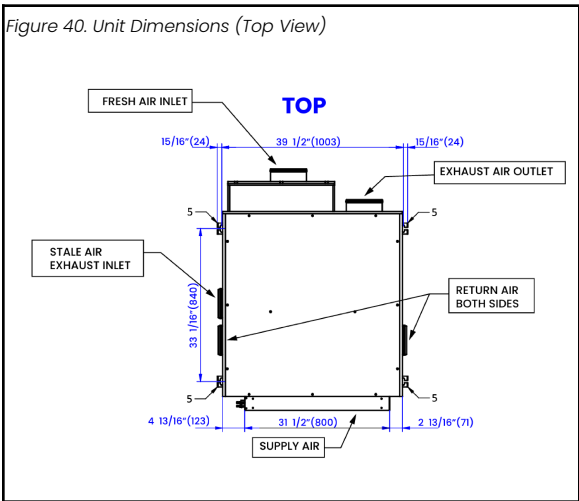
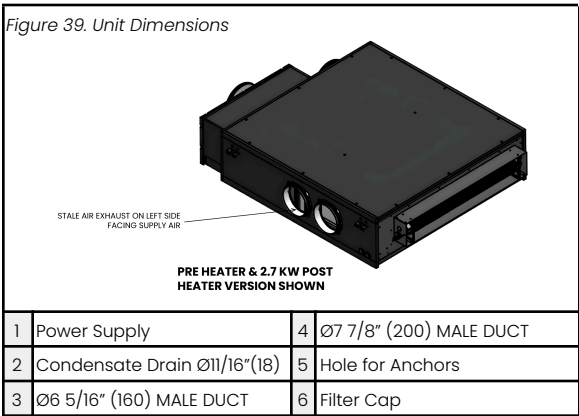


Figure 41. Unit Dimensions (Left View)

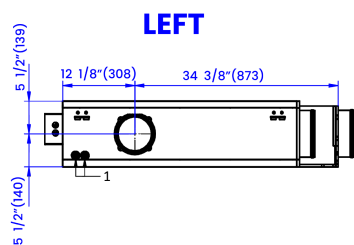


Figure 42. Unit Dimensions (Front View)

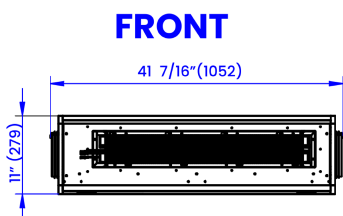


Figure 43. Unit Dimensions (Right View)

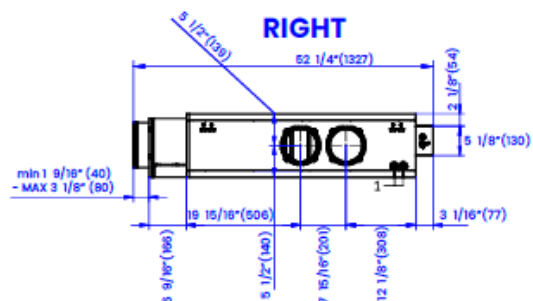


Figure 44. Unit Dimensions (Bottom View)


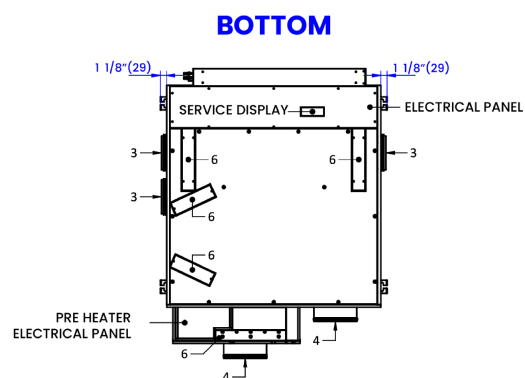


Figure 45. Unit Dimensions (Rear View)

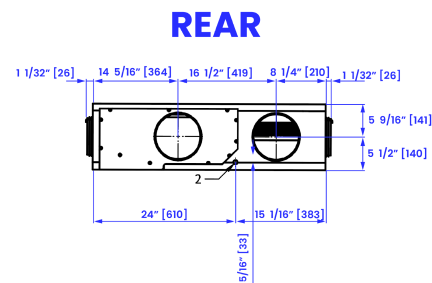

A.4 Mirrored Configuration - With Preheater

To view the dimensions as a high-resolution PDF, click the link below:

[PDF AIO Ceiling Ducted with ERV and Preheater \(Gen ...](#)

Figure 46. Unit Dimensions



1	Power Supply	4	Ø7 7/8" (200) MALE DUCT
2	Condensate Drain Ø11/16" (18)	5	Hole for Anchors
3	Ø6 5/16" (160) MALE DUCT	6	Filter Cap

Figure 47. Unit Dimensions (Top View)

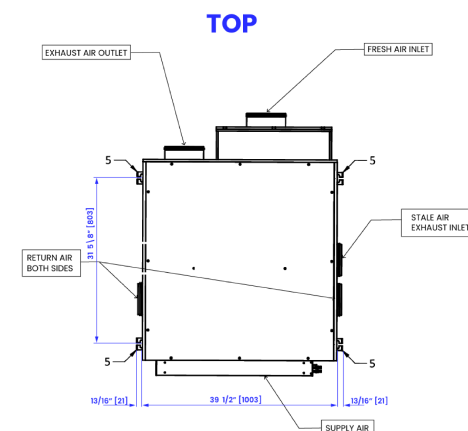


Figure 48. Unit Dimensions (Left View)

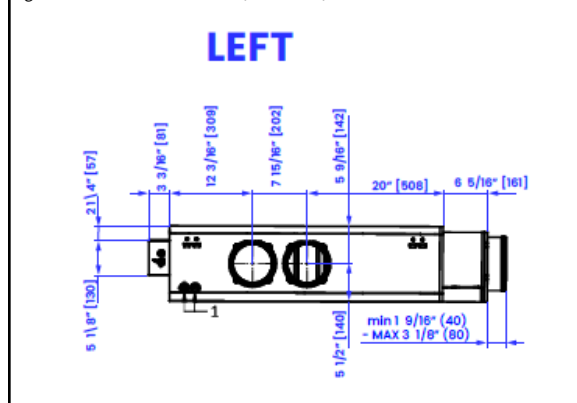


Figure 49. Unit Dimensions (Front View)

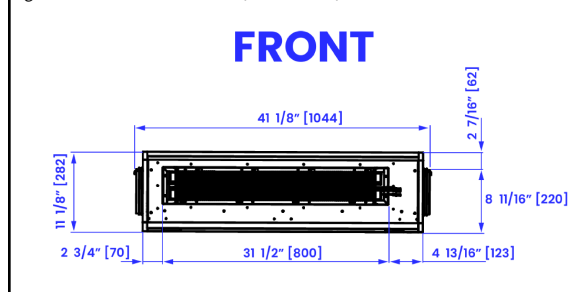


Figure 50. Unit Dimensions (Right View)

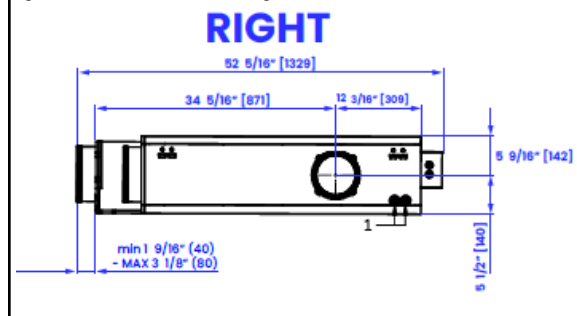


Figure 51. Unit Dimensions (Bottom View)


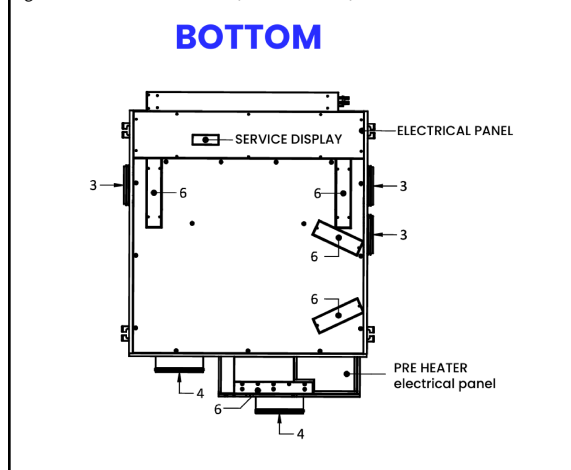


Figure 52. Unit Dimensions (Rear View)

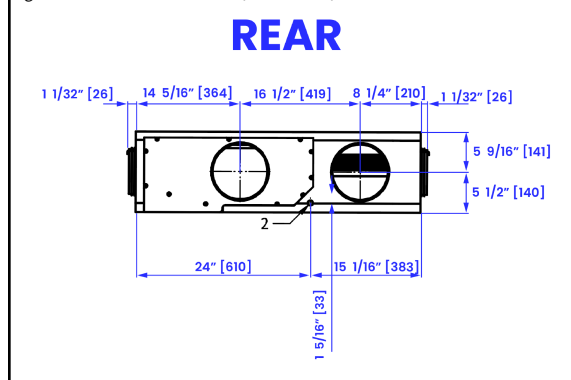


APPENDIX B – WIRING DIAGRAM

B.1 Manufactured before January, 2026

To view the diagram as a high-resolution PDF, click the link below:

[PDF AIO Ceiling Ducted Wiring Diagram \(Pre-Jan 202...](#)


Figure 53.

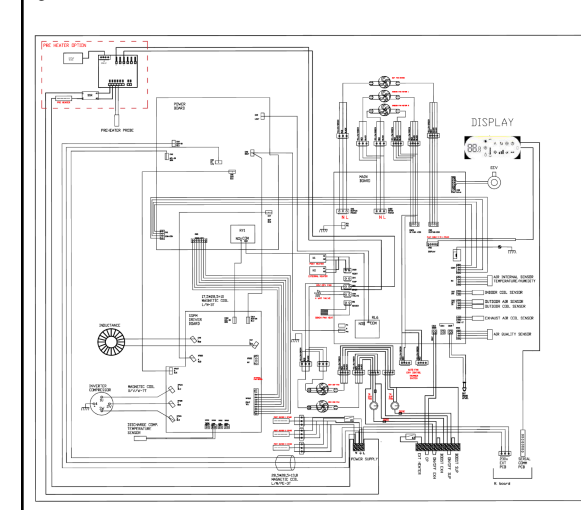

B.2 Manufactured after January, 2026




To view the diagram as a high-resolution PDF, click the link below:

[PDF AIO Ceiling Ducted Wiring Diagram \(Post-Jan 20...](#)

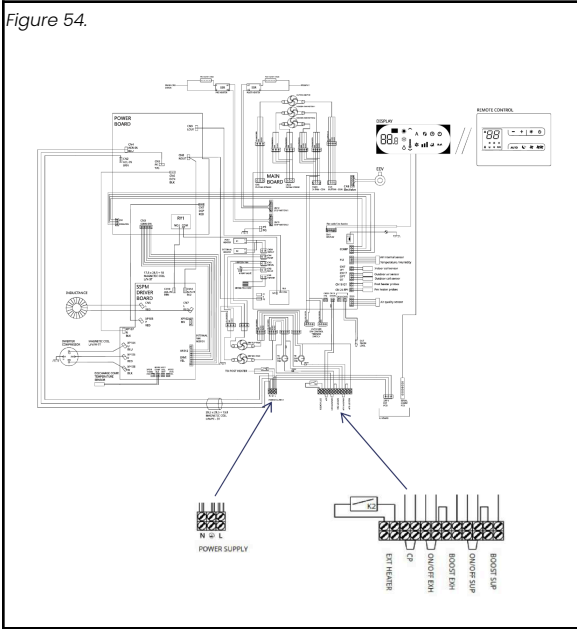

APPENDIX C – FAN CURVES

The following graphs illustrate airflow versus external static pressure at low, medium, and high fan speeds.

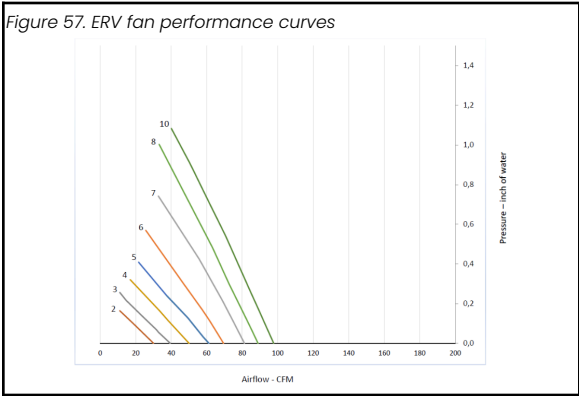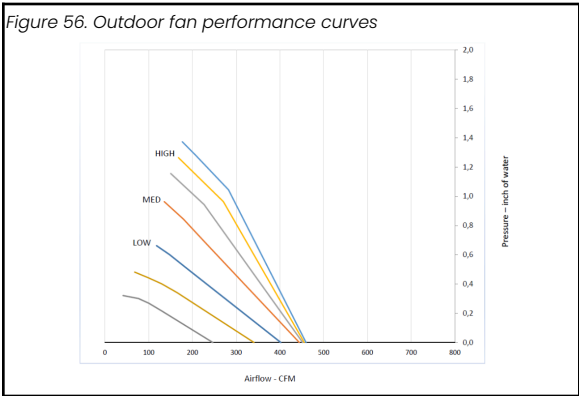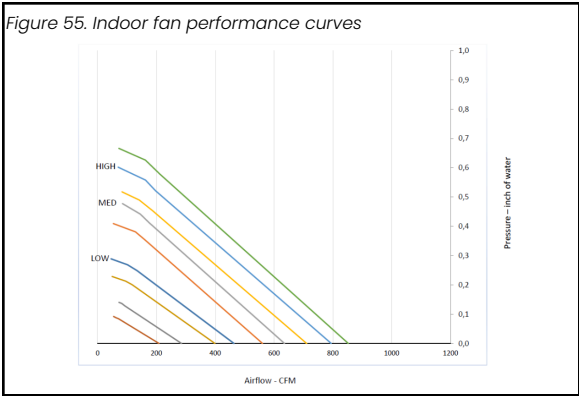

APPENDIX D – WARRANTY

For detailed warranty terms and conditions, click on the link below:

[AIO Warranty Terms and Conditions - 2026 - INN...](#)

APPENDIX E – GLOSSARY

Term	Definition
BMS	Building Management System. A centralized system used to monitor and control building equipment. The unit may communicate with a BMS through dry contacts or an optional Modbus or BACnet gateway.
CFM	Cubic feet per minute. A unit used to measure airflow rate.
CP	Remote On-Off Contact. A low-voltage dry-contact input used to enable or disable unit operation through an external device, such as a fire-alarm system, window switch, or hotel key-card system. The contact must be closed for the unit to operate.
ERV	Energy Recovery Ventilator. An integrated ventilation system that introduces filtered outdoor air, exhausts stale indoor air, and transfers sensible and latent energy between the two airstreams.
GWP	Global Warming Potential. A measure of how much heat a greenhouse gas traps in the atmosphere relative to carbon dioxide. R-32 has a GWP of 675 based on the 100-year assessment commonly used for refrigerant ratings.
in. WC / Pa	Inches of water column/pascals. Units of pressure (in. w.c. = U.S. customary; Pa = SI) used to express the external static pressure of ductwork, louvers, and other airflow-system components.
P-Trap	A plumbing fitting installed in the condensate drain line to maintain a water seal. The seal prevents air from entering through the drain line and interfering with condensate drainage.
Potentiometer	An adjustable control, also known as a trimmer, used to calibrate the ERV supply and exhaust fan speeds. The potentiometers are located inside the Electrical Compartment.


APPENDIX F – REVISION HISTORY

Rev	Date	Revised By	Changes
2.1	3 Aug 2026	Yossi Myhill	Complete revision



With over 20 years of experience in the climate comfort sector, we have a clear goal: growth through innovation. Our team is laser-focused on the conception, development, and production of innovative heating, ventilation, and air conditioning solutions. This mission has developed through bringing together technical skills, creativity, technology, design, Italian passion, and a global vision to achieve the best energy efficiency and performance.

[innova.co](https://www.innova.co) | **USA:** 216-710-1000 **Canada:** 416-739-1000

 

© 2026 INNOVA. All rights reserved.

Revised August 18, 2026

AIO™ Ceiling Ducted with ERV (Gen 3) **Installation
Guide**