


AIO™ ERV Module (AWERV30-3) for Wall Mounted and Wall Mounted Pro (Gen 3)

Installation Manual

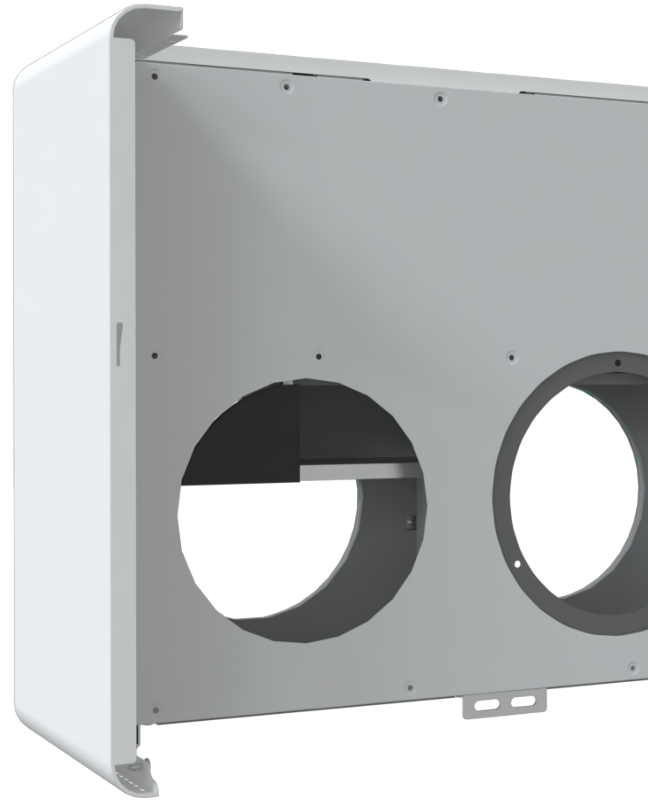

CONTACT INFO

VIP Customer/Technical Support

Email: vip@innova.co

Phone: [\(212\) 204-2700](tel:(212)204-2700)

DISCLAIMER

This documentation is intended for informational use only and should not be construed as a binding representation or contract. This documentation is provided "as is" without warranty of any kind, either express or implied. INNOVA and its affiliates disclaim all liability arising from the use or misuse of this documentation.

Illustrations may not be to scale, and all information and dimensions stated herein are subject to change at any time at the sole discretion of INNOVA. Benefits described herein apply only to the extent that the product is installed correctly in the correct application and used for its intended purpose.

INNOVA is constantly innovating and improving its products and reserves the right to modify product design and specifications without notice and without incurring any obligations.

AIO® is a registered trademark of INNOVA.

Copyright © 2026 INNOVA. All rights reserved.

1. WALL MOUNTED

1.1 Description

The AIO™ Wall Mounted ERV module adds fresh air and heat recovery to the AIO™ Wall Mounted unit.

No additional exterior vents are required, as the ERV module fits behind the AIO™ Wall Mounted and uses the same intake and exhaust vents.

Treated and MERV 13 filtered fresh air is introduced into the room via the supply louver of the AIO™ Wall Mounted unit.

Filter changes are easily done from the upper and lower access panels.

The AIO™ Wall Mounted provides power for the ECM fans and electronics, so no additional power source is required.

The onboard controller of the AIO™ Wall Mounted unit can be used to turn the fresh air supply on and off and to set the amount of fresh air.

The ERV module works for both the standard and pro versions and adds 5" (127 mm) to the total depth.

The included extended side panels give the unit a clean finished look.

⚠ WARNING


- This instruction is an integral part of the booklet of the appliance on which the kit is installed. Please consult this booklet for general warnings and fundamental safety rules.
- For a rapid and correct assembly of the components, carefully follow the sequences described in the various sections.
- All operations must be performed by qualified personnel using the required Personal Protective equipment.

1.2 Installation arrangement

1.2.1 Preparation of the air conditioner

Before installing the ERV module, it is necessary to prepare the air conditioner.


Figure 1.

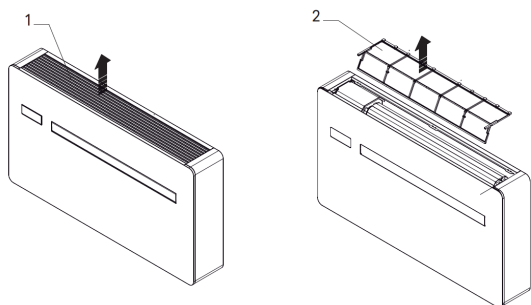

1 Intake grid

2 Filter

Figure 2.

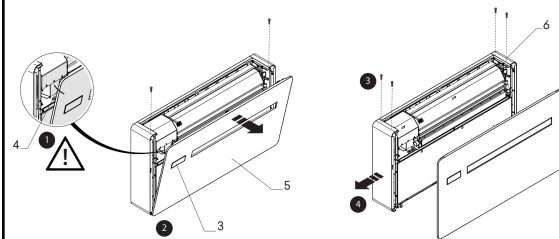

3 Control Panel

4 Connectors

5 Front panel

6 Side panel

1. Remove the upper grille.
2. Remove the filter.
3. Unscrew the two screws.
4. Remove the two screws securing the aesthetic panel.
5. Remove the aesthetic panel.
6. Unscrew the four sidewall fixing screws.
7. Remove the side panels.

1.3 Installation

1.3.1 ERV module installation

The devices are provided with a metal support for wall mounting. For certain installations, such as high on a wall, extra support is required due to the unit's weight.

⚠ WARNING

HEAVY OBJECT AND FALL HAZARD

- **ALWAYS** ensure the mounting surface and hardware can support at least 100 pounds to account for leverage and vibration.
- **NEVER** mount to drywall alone. Unit must be secured directly to structural studs or a reinforced structural backing.
- **REQUIRES A TWO-PERSON LIFT** during installation. Do not attempt to lift or mount this unit alone.

Figure 3.

1. Make the hole.
2. Fix the metal bracket and wall plug.




- Place the module on a level surface to check its weight.
- Check that the unit is not over a water level.

3. Lift the ERV module and attach it to the base.
4. Hook the ERV module to the mounting bracket.
5. Verify the correct installation of the mounting points.
6. Attach the ERV module to the side panel.

1.3.2 Mounting

Figure 4.

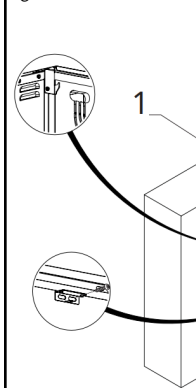


1 ERV module

2 Conditioner


3 Interlocking point

4	Fixing screws
---	---------------

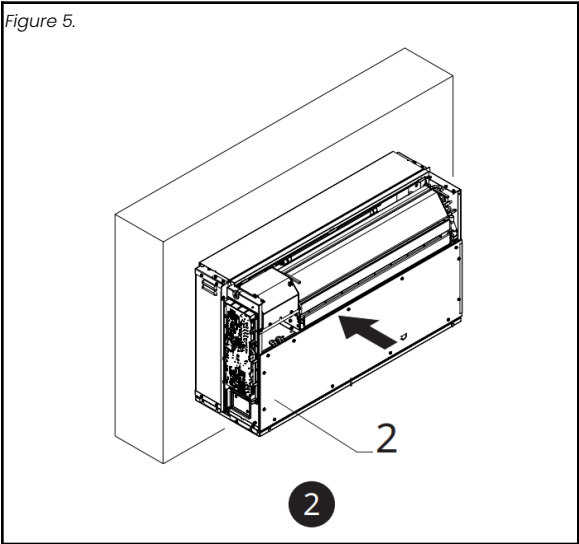


1. Lift the unit from the sides at the base, causing the ERV module power cord to protrude from the bottom.
2. Hang the air conditioner on the bracket provided on the ERV module.
3. Verify the correct hooking to the interlocking points.
4. Attach the unit to the ERV module with the bolts and nuts provided.
5. Fasten the unit's two Anti-lift brackets to the two Anti-Lift brackets on the front of the ERV module.
6. Fasten the two Anti-Lift brackets located on the back of the ERV module to the wall.

A. Rear view

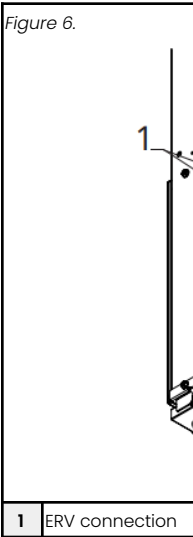

- Connect the ERV module power cord to the power outlet. The ERV module is now mounted.

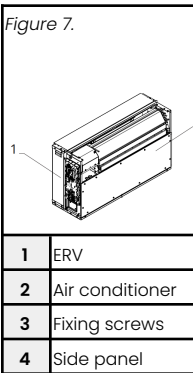

1. Place the new side panel on the ERV module.
2. Screw in the fixing screws.
3. Reassemble the air conditioner unit.
4. Refix the cover of the air conditioner unit.

1.4 Activation

1.4.1 Turning on and off

The ERV module is now ready to be used. The touchpad of the ERV module is located on the front of the unit.

To access the basic functions

1. Press for 10 seconds.
2. Appears .

To access the advanced functions

1. From the basic mode, press for about 5 seconds.
2. Appears .

3. The advanced menu is accessed.

To move within the menu or change values:

1. Use $\leftarrow$ $\rightarrow$.

To select a menu item and to confirm the changes made:

1. Press ⏻ .
2. The menu item is selected, and the settings are accessed.
3. Changes are confirmed when the symbol ⏻ appears.

To exit menu items without saving:

1. Press A .
2. You exit the selected menu item.

To exit the settings menu:

1. Press A .
2. Appears EF .
3. You return to the basic menu.

To activate the ERV module:

1. Select Hr .
2. Nothing appears.
3. Press ⏻ .
4. Select YS .
5. Press ⏻ to confirm.
6. Appears ⏻ .

To deactivate the ERV module:

1. Select Hr .
2. Press ⏻ .
3. Select no .
4. Press ⏻ to confirm.
5. Appears ⏻ .

⚠ WARNING

If there is no communication between the ERV module and the unit or if the ERV module is not connected, ER24 appears.

2. ERV WALL MOUNTED PRO

2.1 Description

The AIO™ Wall Mounted ERV module adds fresh air and heat recovery to the Wall Mounted unit.

No additional exterior vents are required, as the ERV module fits behind the AIO™ Wall Mounted and uses the same intake and exhaust vents.

Treated and MERV 13 filtered fresh air is introduced into the room via the supply louver of the AIO™ Wall Mounted unit.

Filter changes are easily done from the upper and lower access panels.

The AIO™ Wall Mounted provides power for the ECM fans and electronics, so no additional power source is required.

The onboard controller of the AIO™ Wall Mounted unit can be used to turn the fresh air supply on and off and to set the amount of fresh air.

The ERV module works for both the standard and pro versions and adds 5" (127 mm) to the total depth.

The included extended side panels give the unit a clean, finished look.

⚠ WARNING

- This instruction is an integral part of the booklet of the appliance on which the kit is installed. Please consult this booklet for general warnings and fundamental safety rules.
- For rapid and correct assembly of the components, carefully follow the sequences described in the various sections.
- All operations must be performed by qualified personnel using the required Personal Protective equipment.

2.2 Installation

2.2.1 Preparation of the site

Before installing the unit, prepare the air conditioning system.

Figure 8.


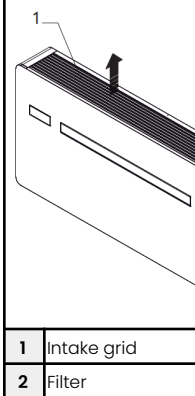


Figure 9.

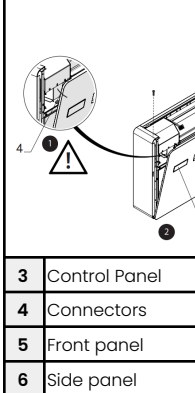

1. Remove the upper access panel.
2. Remove the filter.
3. Unscrew the top panel.
4. Remove the top panel.
5. Remove the air conditioning system.
6. Unscrew the front panel.
7. Remove the side panel.

2.3 Installation

2.3.1 ERV module installation


The devices are provided with metallic support for mounting on the wall.

**WARNING**

You can install the ERV module through two configurations (A and B).

A – Configuration A

Figure 10.

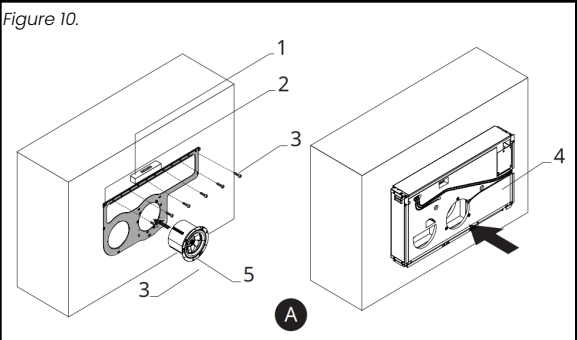

1	Spirit level
2	Fixing bracket
3	Fixing screws
4	ERV module
5	Fan

For configuration A:

1. Use the wall bracket included with the Wall Mounted Pro.
2. Make the holes using a drill.
3. Fix the metallic support with the screws and wall plugs.
4. Insert the fan into the hole in the wall.
5. Secure the fan with the fixing screws provided.
6. Ensure that the fan cables protrude from the bottom.


**WARNING**

- Place the metallic support on a level surface that is capable of supporting its weight.
- Check that the installation is horizontal using a water level.

7. Lift the ERV module by taking it from the sides of the base.
8. Hook the ERV module to the top of the metal bracket.
9. Verify the correct hooking to the interlocking points.
10. Attach the ERV unit to the wall with the fisher.

B – Configuration B

Figure 11.

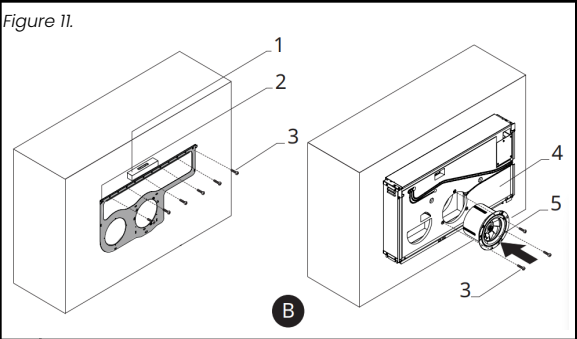

1	Spirit level
2	Fixing bracket
3	Fixing screws
4	ERV module
5	Fan

For configuration B:

1. Use the wall bracket included with the Wall Mounted Pro.
2. Make the holes using a drill.
3. Fix the metallic support with the screws and wall plugs.


**WARNING**

- Place the m that is capa
- Check that t a water level

4. Lift the ERV mo the base.
5. Hook the ERV i bracket.
6. Verify the cor points.
7. Attach the ERV
8. Insert the fan
9. Secure the fan while keeping
10. Insert the fan module.

2.3.2 Mounting

Figure 12.

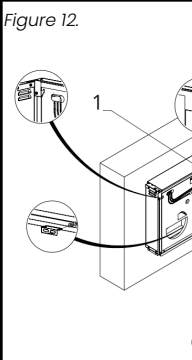



1	ERV module
2	Conditioner
3	Interlocking point
4	Fixing screws

1. Lift the unit fro the ERV modu bottom.
2. Hang the air c on the ERV mo
3. Verify the cor points.
4. Attach the un and nuts prov

A – Rear view

 
Figure 13.

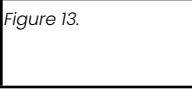

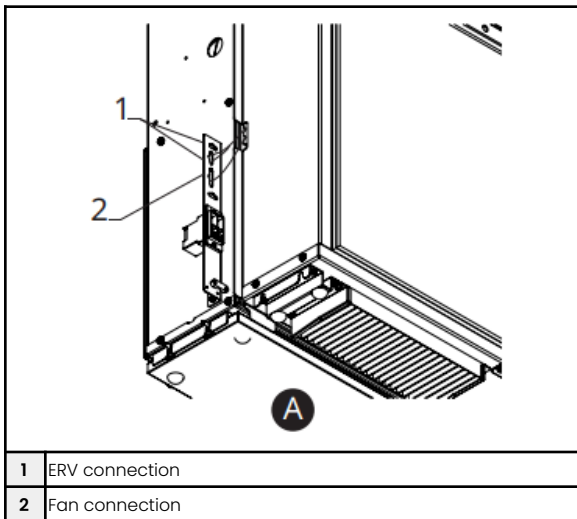

1. Connect the ERV power and communication cables on the side terminal block of the Wall Mounted.
2. Connect the fan cable of the Wall Mounted Pro to the side terminal block.

Figure 14.

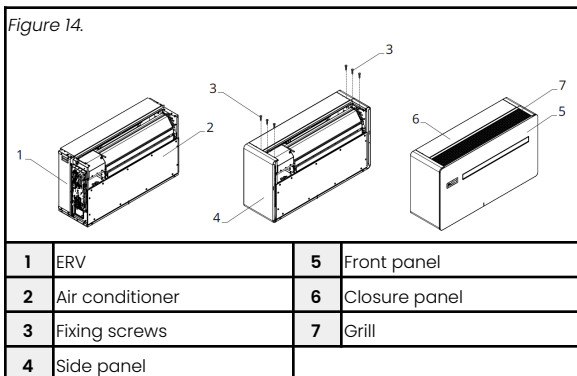

1. Place the new side panels supplied with the accessory.
2. Screw in the fixing screws.
3. Reassemble the front panel.
4. Refix the cover plate.

2.4 Activation

2.4.1 Turning on and off the ERV module

WARNING

The ERV module is activated through the touchpad of the air conditioner.

To access the basic menu:

1. Press  for 10 seconds.
2. Appears .

To access the advanced menu

1. From the basic menu, press  at the same time for about 5 seconds.
2. Appears .

3. The advanced menu is accessed.

To move within the menu or change values

1. Use .

To select a menu item and to confirm the changes made

1. Press .
2. The menu item is selected, and the settings are accessed.
3. Changes are confirmed when the symbol  appears.

To exit menu items without saving

1. Press .
2. You exit the selected menu item.

To exit the settings menu

1. Press .
2. Appears .
3. You return to the basic menu.

To activate the ERV module

1. Select .
2. Nothing appears.
3. Press .
4. Select YS.
5. Press  to confirm.
6. Appears .

To deactivate the ERV module

1. Select .
2. Press .
3. Select no.
4. Press  to confirm.
5. Appears .

WARNING

If there is no communication between the ERV module and the unit, or if the ERV module is not connected, ER24 appears.

2.5 Warranty Information

For detailed terms and conditions, click the link below:

 [AIO Warranty Terms and Conditions - 2026 - INN...](#)



With over 20 years of experience in the climate comfort sector, we have a clear goal: growth through innovation. Our team is laser-focused on the conception, development, and production of innovative heating, ventilation, and air conditioning solutions. This mission has developed through bringing together technical skills, creativity, technology, design, Italian passion, and a global vision to achieve the best energy efficiency and performance.

innova.co | **USA:** 216-710-1000 **Canada:** 416-739-1000



© 2026 INNOVA. All rights reserved.

Revised June 22, 2026

AIO™ ERV Module (AWERV30-3) for Wall Mounted and
Wall Mounted Pro (Gen 3) **Installation Manual**