


AIO™ Wireless Handheld Remote Controller (WRCH20)

User Guide

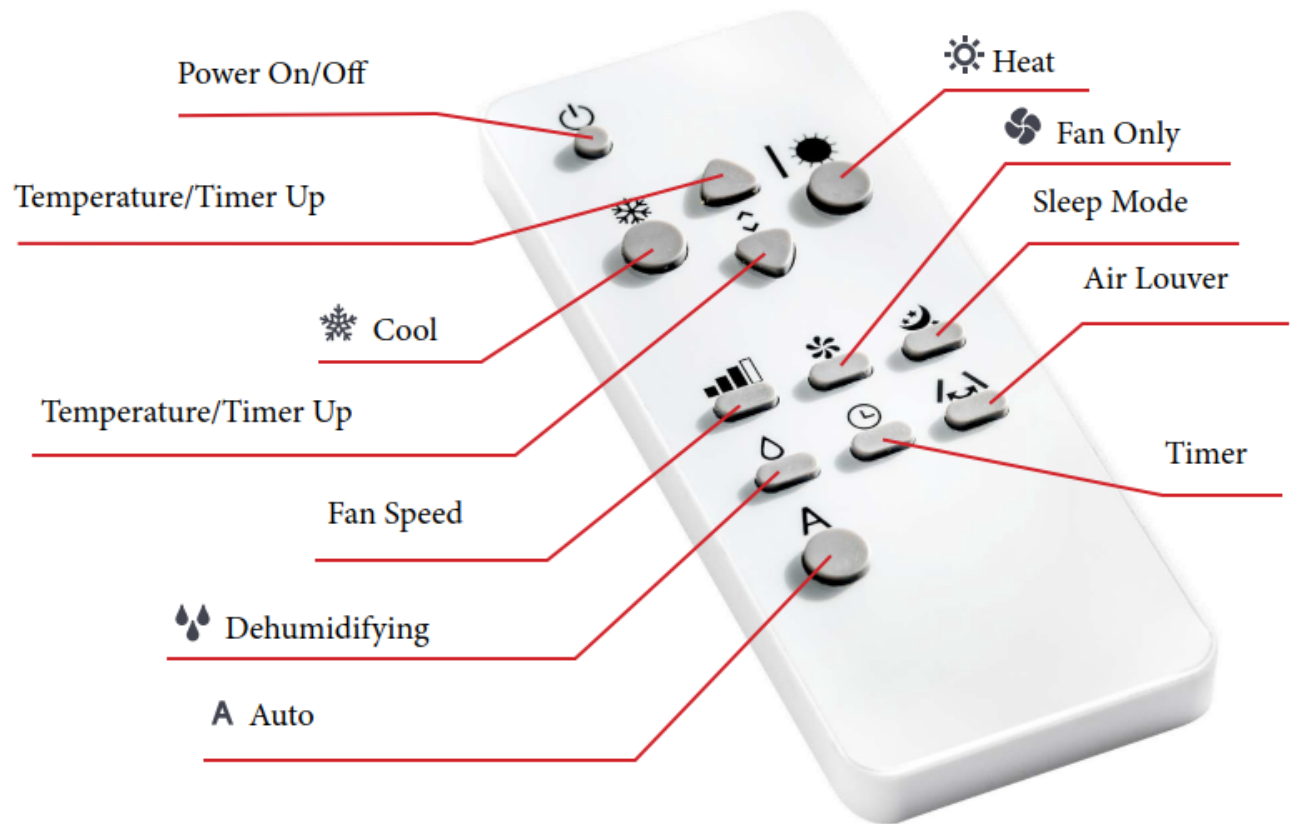

CONTACT INFO

VIP Customer/Technical Support

Email: vip@innova.co

Phone: [\(212\) 204-2700](tel:(212)204-2700)

DISCLAIMER

This documentation is intended for informational use only and should not be construed as a binding representation or contract. This documentation is provided as is without warranty of any kind, either express or implied. INNOVA and its affiliates disclaim all liability arising from the use or misuse of this documentation.

Illustrations may not be to scale, and all information and dimensions stated herein are subject to change at any time at the sole discretion of INNOVA. Benefits described herein apply only to the extent that the product is installed correctly in the correct application and used for its intended purpose.

INNOVA is constantly innovating and improving its products, and reserves the right to modify product design and specifications without notice, without incurring obligations.

AIO® is a registered trademark of INNOVA.

Copyright © 2026 INNOVA. All rights reserved.

1. OPERATION

1.1 Cool ❄️

1. If AIO™ is off, press the  button once to turn it on. (Pressing the button again turns AIO™ off.)
2. Press the  button to select Cool.
3. The  above the  button will remain lit. 
4. Set the target temperature using the up  and down  temp buttons.
5. Set the fan speed by pressing the  button until the desired speed is displayed. For more instructions about fan speed, see Selecting Fan Speed.

1.2 Heat 🔥

1. If AIO™ is off, press the  button once to turn it on. (Pressing the button again turns AIO™ off.)
2. Press the  button to select Heat. 
3. The  above the  button will remain lit.
4. Set the target temperature using the up  and down  temp buttons.
5. Set the fan speed by pressing the  button until the desired speed is displayed. For more instructions about fan speed, see Selecting Fan Speed.

1.3 Dehumidify 💧

1. If AIO™ is off, press the  button once to turn it on. (Pressing the button again turns AIO™ off.)
2. Press the  button to select Dehumidify. 
3. The  above the  button will remain lit.
4. ⚠️ NOTE: There is no option to select fan speed on the dehumidifier.

1.4 Fan Only 🌀

1. If AIO™ is off, press the  button once to turn it on. (Pressing the button again turns AIO™ off.)
2. Press the  button to select Fan Only. 
3. The  above the  button will remain lit.
4. Set the fan speed by pressing the  button until the desired speed

1.5 Auto A

1. If AIO™ is off, press the  button once to turn it on. (Pressing the button again turns AIO™ off.)
2. Press the  button to select Heat.
3. The  above the  button will remain lit. 
4. Set the target temperature using the up  and down  temp buttons.
5. Set the fan speed by pressing the  button until the desired speed is displayed. For more instructions about fan speed, see Selecting Fan Speed.

1.6 Air Louvers

AIO™ is equipped with a louver that can be fixed or oscillate, when in oscillate mode, the louver will sweep up and down to provide better airflow. When turned off, the louvers remain in their last position when the louver button was pressed.

1. To oscillate the louvers, press the  button. The  above the  button will remain lit.
2. To disable the oscillating function, press the  button again when the louvers are in the desired position.

1.7 Timer

The timer enables a one-time, simple on or off of AIO™.

If AIO™ is on and you want AIO™ to turn off at a later time:

1. While AIO™ is operating, press the  button.
2. Use the   keys to select how many hours from the current time that you want AIO™ to turn off.
3. Press the  button again to confirm your selection.

If AIO™ is off and you want AIO™ to turn on at a later time:

1. While AIO™ is operating, press the  button.
2. Use the   keys to select how many hours from the current time that you want AIO™ to turn off.
3. Press the  button again to confirm your selection.
4. Once your selection is confirmed, the display will temporarily show the temperature, mode, and fan speed that will be working when the timer activates. The timer button will remain lit.
5. To reset the timer, set the digits to 00.

1.8 Selecting fan speed

When the unit is operating on fan only, cool, heat, or automatic, you can adjust the fan speed by pressing the  button until the fan speed display is at the desired speed:

- To select Low, press the  button until  appears.
- To select Medium, press the  button until  appears.
- To select High, press the  button until  appears.
- To select Auto, press the  button until  appears.
- Text will also appear that indicates the fan speed.

1.9 Sleep function

The sleep function gradually increases the temperature and eventually turns the unit off. Using the sleep mode is an energy-saving feature that also provides restful sleeping conditions.

To activate the sleep function:

1. With AIO™ operating, press the  button. The  above the  button will remain lit
2. Use the   keys to set the number of hours you wish the unit to run.


To deactivate the sleep function:

1. Pressing the  button again disables the sleep function.



With over 20 years of experience in the climate comfort sector, we have a clear goal: growth through innovation. Our team is laser-focused on the conception, development, and production of innovative heating, ventilation, and air conditioning solutions. This mission has developed through bringing together technical skills, creativity, technology, design, Italian passion, and a global vision to achieve the best energy efficiency and performance.

innova.co | **USA:** 216-710-1000 **Canada:** 416-739-1000

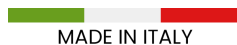 

© 2026 INNOVA. All rights reserved.

Revised June 24, 2026

AIO™ Wireless Handheld Remote Controller (WRCH20)

User Guide