



Instructions – Lower panel installation for bottom return configuration

Rev 00



Date: 09/23/2024

Page: 1 of 3

- Disconnect the power supply from the unit

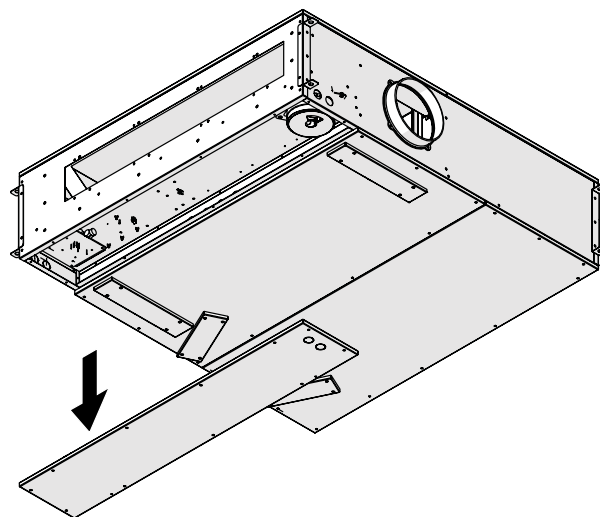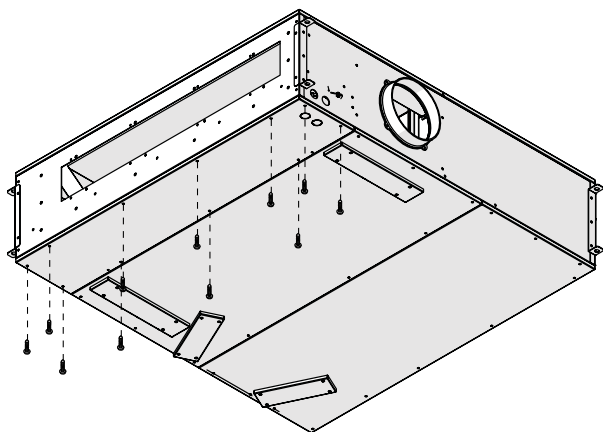

- Remove the electrical panel cover from the unit.

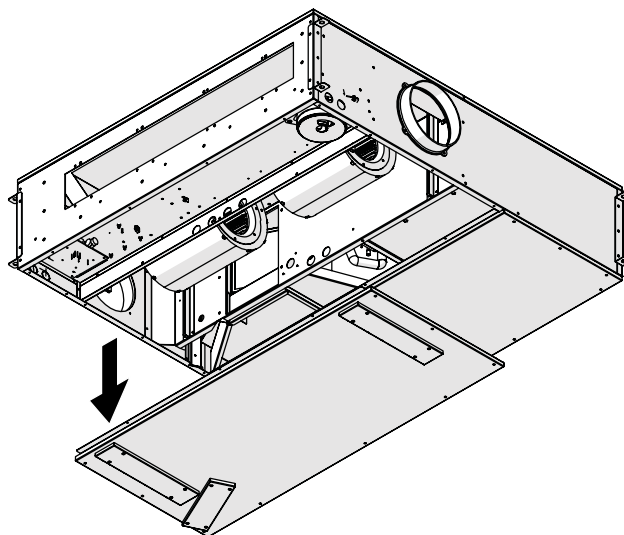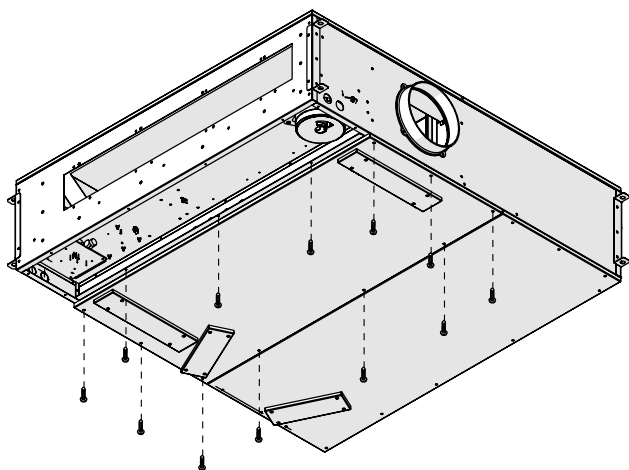



- Remove the existing central lower panel from the unit.

Instructions – Lower panel installation for bottom return configuration



Rev 00

Date: 09/23/2024

Page: 2 of 3

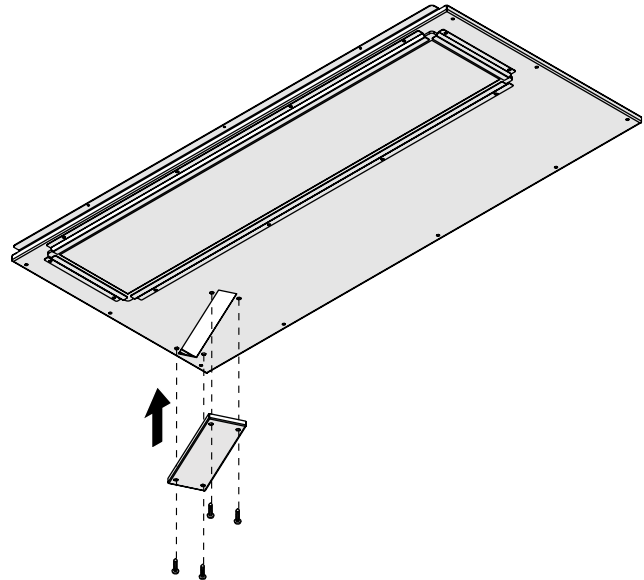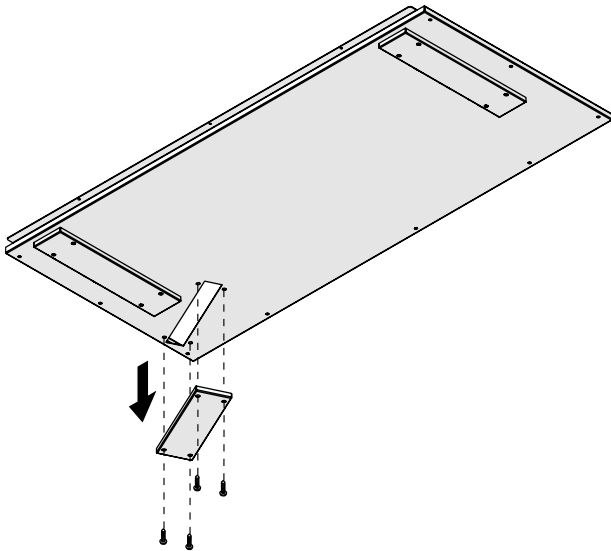

- Remove the filter port from the existing central lower panel.
- Attach the filter port to the replacement lower panel.

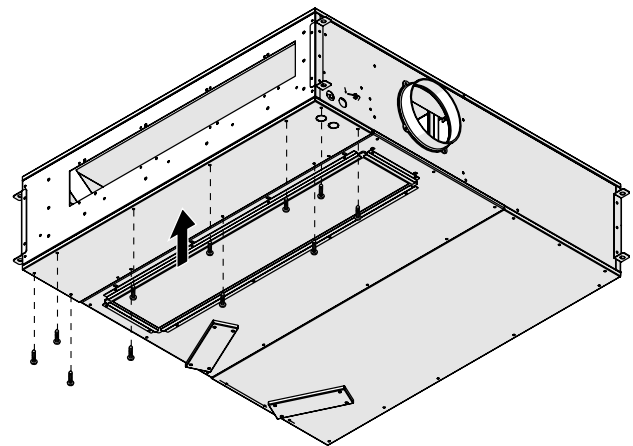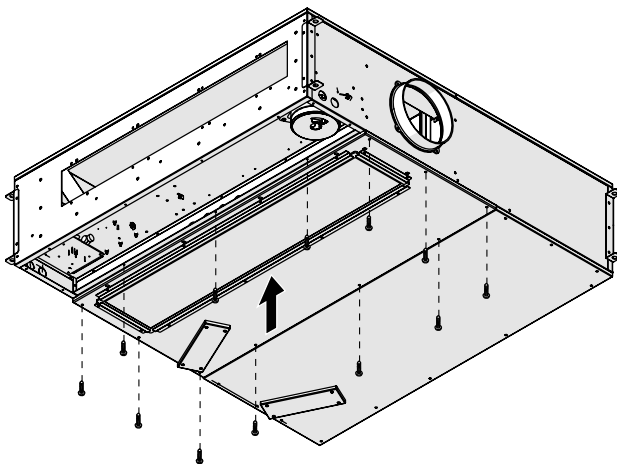

- Secure the replacement central lower panel to the unit using the screws removed earlier.
- Reinstall and secure the electrical panel cover.

Instructions – Lower panel installation for bottom return configuration

Rev 00

Date: 09/23/2024

Page: 3 of 3

Cover the recirculated-air side ducts:

Remove the recirculated-air side ducts and cover the openings with the supplied metal caps to seal the side return openings.

