

AIO™ Vertical Stack (Gen 3)

Troubleshooting Manual



CONTACT INFO

VIP Customer/Technical Support

Email: vip@innova.co

Phone: [\(212\) 204-2700](tel:(212)204-2700)

DISCLAIMER

This documentation is intended for informational use only and should not be construed as a binding representation or contract. This documentation is provided "as is" without warranty of any kind, either express or implied. INNOVA and its affiliates disclaim all liability arising from the use or misuse of this documentation.

Illustrations may not be to scale, and all information and dimensions stated herein are subject to change at any time at the sole discretion of INNOVA. Benefits described herein apply only to the extent that the product is installed correctly in the correct application and used for its intended purpose.

INNOVA is constantly innovating and improving its products and reserves the right to modify product design and specifications without notice, and without incurring any obligations.

CERTIFICATION

The AHRI Certified® participation in the verification of individual products is available at www.ahridirectory.org

ETL Listed. Control Panel
60335-2-40:2022 E
Ed.4 | UL 60335-1:20
Ed.2

AIO® is a registered trademark of INNOVA.

Copyright © 2026 INNOVA. All rights reserved.

CONTENTS

I. VERTICAL STACK.....	4
1.1 General anomalies.....	4
1.1.1 Anomaly table.....	4
1.1.2 Troubleshooting procedures.....	4
1.2 Errors displayed on the screen.....	7
1.2.1 Error table.....	7
1.2.2 Troubleshooting procedures.....	8
1.3 Errors reported by the Driver board (LED).....	11
1.3.1 Error table.....	11
1.4 Additional procedures.....	12
1.4.1 Replace the main board.....	12
1.4.2 Replace the power board.....	12
1.4.3 Replace the driver board.....	12
1.4.4 Install the Rolbit board outside the unit.....	12
1.4.5 Install the Rolbit board inside the unit, behind the electrical panel.....	12
1.4.6 Install the Rolbit board inside the unit, in the electrical panel.....	12
1.4.7 Airflow adjustment (PI-P8).....	12
1.4.8 Firmware and parameter loading.....	12
1.4.9 Connection and verification with Supervisor.....	13
1.4.10 Compressor replacement.....	13
1.4.11 Reconfiguration of the CN6 connector.....	13
1.5 Maintenance operations.....	13
1.5.1 General cleaning of the unit.....	13
1.5.2 Cleaning or filter replacement.....	13
1.5.3 Cleaning or replacement of the batteries	13
1.5.4 Cleaning or replacement of the condensate collection tray.....	13
1.5.5 Refrigerant charge check.....	13
1.6 Technical information.....	14
1.6.1 Electronic boards.....	14
1.6.2 Resistance values of the probes.....	14

1. VERTICAL STACK

1.1 General anomalies

1.1.1 Anomaly table

Code	Description	Blocking
"G1" p. 3	The unit does not cool	No
"G2" p. 5	The unit does not heat	No
"G3" p. 7	Water leak	No
"G4" p. 8	Presence of condensation on the unit	No
"G5" p. 9	High noise level	No
"G6" p. 10	Faulty heating element	No
"G7" p. 11	Ice on the internal coil (summer)	No
"G8" p. 12	Ice on the external coil (winter)	No
"G9" p. 13	Ice on the condensate collection tray	No

1.1.2 Troubleshooting procedures

G1

Figure 1. G1 troubleshooting procedure video link



Anomaly: The unit does not cool

Blocking: No

General information

Compressor discharge temperature limits:

- R410a temperature below 100°C
- R32 temperature below 110°C

START

1. Check that the unit is set to cooling mode with a setpoint lower than the ambient temperature. Is it set correctly?
Yes
▶ Proceed to the next check
No
▶ Set the unit correctly
2. Check that the filters are clean. Are they clean?
Yes
▶ Proceed to the next check
No
▶ Clean filters
3. Check that the airflow rate is correct. Does it fall within the nominal values?
Yes
▶ Proceed to the next check
No
▶ Set the P1-P8 setting of the unit to ensure the correct airflow (see paragraph "Airflow adjustment(P1-P8)" p. 31)
4. Check that cold air is coming out from the internal side and warm air from the external side.

Is this the case?

Yes

- ▶ Proceed to the next check

No

- ▶ Check the correct operation of the 4-way valve

5. Check the compressor discharge temperature with a thermometer. Does it fall within the compressor discharge temperature limits?

Yes

- ▶ Proceed to the next check

No

- ▶ Have the refrigerant recharged

6. Despite the checks performed, does the anomaly persist?

Yes

- ▶ Connect the supervisor and check the unit parameters (see paragraph "Connection and verification with Supervisor", p. 31)

No

- ▶ Resolved

7. Despite the checks performed, does the anomaly persist?

Yes

- ▶ Have the unit sizing checked

No

- ▶ Resolved

END

G2

Figure 2. G2 troubleshooting procedure video link



Anomaly: The unit does not heat

Blocking: No

General information

Compressor discharge temperature limits:

- R410a temperature below 100°C
- R32 temperature below 110°C

START

1. Check that the unit is set to heating mode with a setpoint higher than the ambient temperature. Is it set correctly?
Yes
▶ Proceed to the next check
No
▶ Set the unit correctly
2. Check that the filters are clean. Are they clean?
Yes
▶ Proceed to the next check
No
▶ Clean filters
3. Check that the airflow rate is correct. Does it fall within the nominal values?

Yes

- ▶ Proceed to the next check

No

- ▶ Set the unit correctly to ensure the correct air flow adjustment(P1-P8)

4. Check that the unit is set to heating mode with a setpoint higher than the ambient temperature. Is this the case?

Yes

- ▶ Proceed to the next check

No

- ▶ Check the correct operation of the 4-way valve

5. Check the compressor discharge temperature with a thermometer. Does it fall within the compressor discharge temperature limits?

Yes

- ▶ Proceed to the next check

No

- ▶ Have the refrigerant recharged

6. Despite the checks performed, does the anomaly persist?

Yes

- ▶ Connect the supervisor and check the unit parameters (see paragraph "Connection and verification with Supervisor", p. 31)

No

- ▶ Resolved

7. Despite the checks performed, does the anomaly persist?

Yes

- ▶ Have the unit sizing checked

No

- ▶ Resolved

END

G3

Figure 3. G3 troubleshooting procedure video link

Anomaly: Water leak

Blocking: No

START

1. Check that the unit is set to heating mode with a setpoint higher than the ambient temperature. Is it set correctly?
Yes
▶ Proceed to the next check
No
▶ Adjust the setpoint correctly
2. Check that the unit is set to heating mode with a setpoint higher than the ambient temperature. Is it set correctly?
Yes

- Proceed to the next check

No

- Secure the trays correctly

3. Check that the connection pipes under the trays are properly secured to the tray fitting. Are they securely fastened?

Yes

- Proceed to the next check

No

- Secure the pipes properly

4. Check that the pipe from the internal coil tray flows into the external coil tray. Is it positioned correctly?

Yes

- Proceed to the next check

No

- Position the pipe correctly

5. Despite the checks performed, does the anomaly persist?

Yes

- Check the thermal insulation of the pipes in the compressor area

No

- Resolved

END

G4

Figure 4. G4 troubleshooting procedure video link



Anomaly: Presence of condensation on the unit

Blocking: No

START

1. Check that the ductwork is properly insulated at the unit connections. Is it compliant?

Yes

- Proceed to the next check

No

- Properly insulate the ductwork

2. Check that the filters are clean. Are they clean?

Yes

- Proceed to the next check

No

- Clean filters

3. Check that the air duct is clear of obstructions. Is it clear?

Yes

- Proceed to the next check

No

- Remove the obstructions

4. Check that the fans are intact. Are they intact?

Yes

- Proceed to the next check

No

- Replace the faulty fans

5. Despite the checks performed, does the anomaly persist?

Yes

- Check the integrity of the unit's insulating parts

No

- Resolved

END

G5

Figure 5. G5 troubleshooting procedure video link



Anomaly: High noise level

Blocking: No

START

1. Check that the fans are free. Are they free?

Yes

- Proceed to the next check

No

- Remove the obstructions

2. Check that the compressor and piping are not in contact with metallic parts of the unit. Are they compliant?

Yes

- Proceed to the next check

No

- Reposition the compressor to separate the piping from the metallic parts in contact

3. Despite the checks performed, does the anomaly persist?

Yes

- Set the P1-P8 setting of the unit to ensure the correct airflow (see paragraph "Airflow adjustment(P1-P8)", p. 31)

No

- Resolved

END

G6

Figure 6. G6 troubleshooting procedure video link



Anomaly: Faulty heating element

Blocking: No

START

1. Check on the display that the service setting for

the electric heating element is correct?

Yes

- Proceed to the next check

No

- Set the correct service setting

2. Check that the heating element is not deactivated?

Yes

- Proceed to the next check

No

- Deactivate the heating element

3. Check with a multimeter the voltage on the heating element correctly?

Yes

- Proceed to the next check

No

- Replace the heating element

"Replace the heating element"

4. Check with a multimeter the voltage on the power relay correctly?

Yes

- Proceed to the next check

No

- Check the power relay connection

connected correctly

5. Check with a multimeter the voltage and the power relay connection. Is this the case?

Yes

- Proceed to the next check

No

- Replace the power relay

element

6. Despite the checks performed, does the anomaly persist?

Yes

- Replace the heating element

No

- Resolved

END

G7

Figure 7. G7 troubleshooting procedure video link



Anomaly: Ice on the heating element

Blocking: No

START

1. Check that the

positioned correctly. Is it positioned correctly?

Yes

- Proceed to the next check

No

- Properly position the probe

2. Check that the filters are clean. Are they clean?

Yes

- Proceed to the next check

No

- Clean filters

3. Check that the airflow rate is correct. Does it fall within the nominal values?

Yes

- Proceed to the next check

No

- Set the P1-P8 setting of the unit to ensure the correct airflow (see paragraph "Airflow adjustment (P1-P8)", p. 31)

4. Check that the 4-way valve is functioning correctly. Is it functioning correctly?

Yes

- Proceed to the next check

No

- Replace the 4-way valve

5. Check with a multimeter that there is no voltage on connector CN2. Is this the case?

Yes

- Proceed to the next check

No

- Replace the main board (see paragraph "Replace the main board" p. 30)

6. Despite the checks performed, does the error persist?

Yes

- Check the presence of refrigerant

No

- Resolved

END

G8

Figure 8. G8 troubleshooting procedure video link



Anomaly: Ice on the external coil (winter)

Blocking: No

START

1. Check that the filters are clean. Are they clean?

Yes

 - Proceed to the next check

No

 - Clean filters
2. Check that the airflow rate is below the maximum flow rate value. Is it compliant?

Yes

 - Proceed to the next check

No

 - Set the P1-P8 setting of the unit to ensure the correct airflow (see paragraph "Airflow adjustment(P1-P8)" p. 31)
3. Check that the OPT sensor of the external coil is positioned correctly. Is it positioned correctly?

Yes

 - Proceed to the next check

No

 - Properly position the probe
4. Check that the 4-way valve is functioning correctly. Is it functioning correctly?

Yes

 - Proceed to the next check

No

 - Replace the 4-way valve
5. Check that the CN2 connector is positioned correctly. Is it positioned correctly?

Yes

 - Proceed to the next check

No

 - Position the CN2 connector correctly.
6. Check with a multimeter that there is a 230 V voltage on connector CN2. Is it measured correctly?

Yes

 - Proceed to the next check

No

 - Replace the main board (see paragraph "Replace the main board" p. 30)
7. Despite the checks performed, does the error persist?

Yes

 - Check the presence of refrigerant

No

 - Resolved

END

G9

Figure 9. G9 troubleshooting procedure video link

Anomaly: Ice on the external coil (winter)

Blocking: No

START

1. Check that the unit is positioned correctly towards the outdoor outlet?

Yes

 - Proceed to the next check

No

 - Adjust the position
2. Check that the unit is positioned correctly. Is it positioned correctly?

Yes

 - Proceed to the next check

No

 - Position the unit correctly
3. Check with a multimeter that there is no voltage on connector CN2. Is this the case?

Yes

 - Proceed to the next check

No

 - Replace the main board (see paragraph "Replace the main board" p. 30)
4. Check that the collection tray is functioning correctly. Is it functioning correctly?

Yes

 - Proceed to the next check

No

 - Replace the collection tray
5. Despite the checks performed, does the error persist?

Yes

 - Replace the heating element

No

 - Resolved

END

1.2 Errors display

1.2.1 Error table

Code	Description
"E1"	Temperature/Humidity Sensor Error
"E2"	Internal Coil IPT Sensor Error

Code	Description	Blocking	Condition
			outside the expected range or a short circuit
"E3"	External Air Temperature Sensor Error (OT)	Yes	The input detects a resistance value (ohms) outside the expected range or a short circuit
"E4"	External Coil OPT Sensor Error	Yes	The input detects a resistance value (ohms) outside the expected range or a short circuit
"E5"	Internal fan error	Yes	The internal fan speed is outside the allowable range
"E6"	External Fan Error	Yes	The external fan speed is outside the allowable range
"E7"	Communication error with the display	Yes	No communication between the display and the electronic boards
"E8"	Compressor discharge sensor error	Yes	The input detects an ohm value out of range or a short circuit
"qE"	Water Level Error	Yes	Activation of the maximum level float in the condensate collection tray
"bl"	Display locked	No	Keyboard locked
"cP"	Open contact for presence detection (CP)	Yes	The unit operates only with the CP presence contact closed

1.2.2 Troubleshooting procedures

E1

Figure 10. E1 troubleshooting procedure video link



Problem: Temperature/humidity sensor error

Condition: The input does not detect serial communication with the intervention sensor

Blocking: No

Electronic board: "Electronic boards" *p. 33*

START

1. Check the positioning of the CN21 connector on the main board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
2. Check the 5 V DC power supply on connector CN21. Is it correct?
Yes
▶ Proceed to the next check
No
▶ Replace the main board (see paragraph "Replace the main board" *p. 30*)
3. Despite the checks performed, does the error persist?
Yes

▶ Replace the probe

No

▶ Resolved

END

E2

Figure 11. E2 troubleshooting procedure video link



Problem: Internal Coil IPT Sensor Error

Condition: The input detects a resistance value (ohms) outside the expected range or a short circuit

Blocking: No

Electronic board: "Electronic boards" *p. 33*

Probe resistance values: "Resistance values of the probes" *p. 34*

START

1. Check the positioning of the CN7 connector on the main board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
2. Disconnect the probe and check the resistance value of the probe with a multimeter. Is it compliant with the specifications indicated for the probe (see the specific chapter)?
Yes
▶ Proceed to the next check
No
▶ Replace the probe
3. Despite the checks performed, does the error persist?
Yes
▶ Replace the main board (see paragraph "Replace the main board" *p. 30*)
No
▶ Resolved

END

E3

Figure 12. E3 troubleshooting procedure video link



Problem: External Air Temperature Sensor Error (OT)

Condition: The input detects a resistance value (ohms) outside the expected range or a short circuit

Blocking: Yes

Electronic board: "Electronic boards" *p. 33*

Probe resistance values: "Resistance values of the probes" *p. 34*

START

1. Check the positioning of the CN7 connector on the main board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
2. Disconnect the probe and check the resistance value of the probe with a multimeter. Is it compliant with the specifications indicated for the probe (see the specific chapter)?
Yes
▶ Proceed to the next check
No
▶ Replace the probe
3. Despite the checks performed, does the error persist?
Yes
▶ Replace the main board (see paragraph "Replace the main board" *p. 30*)
No
▶ Resolved

END

E4

Figure 13. E4 troubleshooting procedure video link



Problem: External Coil OPT Sensor Error

Condition: The input detects a resistance value (ohms) outside the expected range or a short circuit

Blocking: Yes

Electronic board: "Electronic boards" *p. 33*

Probe resistance values: "Resistance values of the probes" *p. 34*

START

1. Check the positioning of the CN17 connector on the main board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
2. Disconnect the probe and check the resistance value of the probe with a multimeter. Is it compliant with the specifications indicated for the probe (see the specific chapter)?
Yes
▶ Proceed to the next check
No
▶ Replace the probe
3. Despite the checks performed, does the error persist?
Yes
▶ Replace the main board (see paragraph "Replace the main board" *p. 30*)
No
▶ Resolved

END

E5

Figure 14. E5 troubleshooting procedure video link



Problem: Internal Fan Error

Condition: The internal fan speed is outside the allowable range

Blocking: Yes

Electronic board: "Electronic boards" *p. 33*

START

1. Check the positioning of the CN23 connector on the main board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
2. Check the 115 V AC or 230 V AC power on the power connector. Is it correct?
Yes
▶ Proceed to the next check
No
▶ Replace the main board (see paragraph "Replace the main board" *p. 30*)
3. Check the VSP 0–10 V DC signal on the CN23 connector. Is it correct?
Yes
▶ Proceed to the next check
No
▶ Replace the main board (see paragraph "Replace the main board" *p. 30*)
4. Despite the checks performed, does the error persist?
Yes
▶ Replace the faulty fan
No
▶ Resolved

END

E6

Figure 15. E6 troubleshooting procedure video link



Problem: External Fan Error

Condition: The internal fan speed is outside the allowable range

Blocking: Yes

Electronic board: "Electronic boards" *p. 33*

START

1. Check the positioning of the CN23 connector on the main board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
2. Check the 115 V AC or 230 V AC power on the power connector. Is it correct?
Yes
▶ Proceed to the next check
No
▶ Replace the main board (see paragraph "Replace the main board" *p. 30*)
3. Check the VSP 0–10 V DC signal on the CN23 connector. Is it correct?
Yes
▶ Proceed to the next check
No
▶ Replace the main board (see paragraph "Replace the main board" *p. 30*)
4. Despite the checks performed, does the error persist?
Yes
▶ Replace the faulty fan
No
▶ Resolved

END

E7

Figure 16. E7 troubleshooting procedure video link



Problem: Communication Error with Display

Condition: No communication between the display and the electronic boards

Blocking: Yes

Electronic board: "Electronic boards" p. 33

START

1. Check the positioning of the CN11 connector on the main board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
2. Check that the COMP cable connects the main board to the power board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
3. Check that the COMP cable connects the power board to the driver board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
4. Check that the two red LEDs on the power board are lit. Are they lit?
Yes
▶ Proceed to the next check
No
▶ Replace the power board (see paragraph "Replace the power board" p. 30)
5. Check that the green LED on the driver board flashes every second. Does it flash every second?
Yes
▶ Proceed to the next check
No
▶ Replace the driver board (see paragraph "Replace the driver board" p. 30)
6. Check that the display cables are intact and show no signs of fraying or damage. Are they compliant?
Yes
▶ Proceed to the next check
No
▶ Replace the damaged cables
7. Despite the checks performed, does the error persist?
Yes

▶ Replace the main board (see paragraph "Replace the main board" p. 30)

No

▶ Resolved

END

E8

Figure 17. E8 troubleshooting procedure video link



Problem: Compressor discharge sensor error

Condition: The input detects an ohm value out of range or a short circuit

Blocking: Yes

Electronic board: "Electronic boards" p. 33

START

1. Check the positioning of the XP209 connector on the driver board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
2. Disconnect the probe and check the resistance value of the probe with a multimeter. Is it compliant with the specifications indicated for the probe (see the specific chapter)?
Yes
▶ Proceed to the next check
No
▶ Replace the probe
3. Despite the checks performed, does the error persist?
Yes
▶ Replace the driver board (see paragraph "Replace the driver board", p. 30)
No
▶ Resolved

END

oF

Figure 18. oF troubleshooting procedure video link



Problem: Water Level Error

Condition: Activation of the maximum level float in the condensate collection tray

Blocking: Yes

Electronic board: "Electronic boards" p. 33

START

1. Check that the condensate collection tray is correct?
Yes
▶ Proceed to the next check
No
▶ Check the tray
2. Check the position of the main board?
Yes
▶ Proceed to the next check
No
▶ Correctly position the board
3. Check the operation of the multimeter. Does the continuity test work?
Yes
▶ Proceed to the next check
No
▶ Replace the multimeter
4. Despite the checks performed, does the error persist?
Yes
▶ Replace the main board (see paragraph "Replace the main board", p. 30)
No
▶ Resolved

END

bl

Figure 19. bl troubleshooting procedure video link

Problem: Display lock

Condition: Keyboard not responding

Blocking: No

Electronic board: "Electronic boards" p. 33

START

1. Check that the display is not pressed for about 10 seconds?
Yes
▶ Proceed to the next check
No
▶ Press the display for 10 seconds
2. Despite the checks performed, does the error persist?
Yes
▶ Replace the display
No
▶ Resolved

END

Figure 20. cP troubleshooting procedure video link



Problem: CP presence contact open

Condition: The unit operates only with the CP presence contact closed

Blocking: Yes

Electronic board: "Electronic boards" p. 33

START

1. Check the positioning of the CN13 connector on the main board. Is it positioned correctly?
Yes
▶ Proceed to the next check
No
▶ Correctly position the connector
2. Check with a multimeter that the circuit is closed. Is it closed?
Yes
▶ Replace the main board (see paragraph "Replace the main board" p. 11)
No
▶ Proceed to the next check
3. Check for the presence of a jumper on the terminal connected to connector CN13. Is it present?
Yes
▶ Proceed to the next check
No
▶ Check the presence of the cables connected to connector CN13
4. Does the issue persist despite the checks performed?
Yes
▶ Replace the main board (see paragraph "Replace the main board" p. 30)
No
▶ Resolved

END

1.3 Errors reported by the Driver board (LED)

1.3.1 Error table

Code	Flashing (LED)	Error	QR	Weblinks
1	●○○○○ ○	Excessive DC voltage		Link to the procedure video
2	○○○○○ ○	Insufficient DC voltage		Link to the procedure video

Code	Flashing (LED)	Error	QR	Weblinks
3	●●○○○	Excessive phase current		Link to the procedure video
4	○○○○○ ○	Loss of synchronization		Link to the procedure video
5	●●○○○	Phase loss (speed)		Link to the procedure video
6	○○○○○	Phase loss (current)		Link to the procedure video
7	●●○○○	IPM_FO - signal error (narrow)		Link to the procedure video
8	○○○○○ ○	IPM_FO - signal error (wide)		Link to the procedure video
12	○○○○○	PFC - incorrect current/incorrect power		Link to the procedure video
				Link to the procedure video
				Link to the procedure video
15	●●○○○	AD error		Link to the procedure video
18	○○○○○	Temperature sensor failure		Link to the procedure video
19	●●○○○	Excessive compressor temperature		Link to the procedure video
20	○○○○○	Abnormal compressor casing temperature		Link to the procedure video
21	●●○○○	Phase current disturbance		Link to the procedure video
22	○○○○○	Communication error		Link to the procedure video
				Link to the procedure video
23	●●○○○	EEPROM error		Link to the procedure video
26	○○○○○	IPM overheating error		Link to the procedure video
27	●●○○○	Excessive AC current		Link to the procedure video

1.4 Additional procedures

1.4.1 Replace the main board

[Link to the procedure video](#)

Figure 21. Main board replacement procedure video link

1.4.2 Replace the p

[Link to the procedu](#)

Figure 22. Power board

1.4.3 Replace the driver board

[Link to the procedure video](#)

Figure 23. Driver board replacement procedure video link



1.4.4 Install the Rolbit board outside the unit

[Link to the procedure video](#)

Figure 24. Rolbit board installation procedure video link



1.4.5 Install the Rolbit board inside the unit, behind the electrical panel

[Link to the procedure video](#)

Figure 25. Rolbit board installation procedure video link



1.4.6 Install the Rolbit board inside the unit, in the electrical panel

[Link to the procedure video](#)

Figure 26. Rolbit board installation procedure video link



1.4.7 Airflow adjustment (P1-P8)

[Link to the procedure video](#)

Figure 27. Airflow adjustment procedure video link



1.4.8 Firmware and parameter loading

[Link to the procedure video](#)

Figure 28. Firmware and parameter loading procedure video link



1.4.9 Connection c

[Link to the procedu](#)

Figure 29. Connection
video link

1.4.10 Compressor

[Link to the procedu](#)

Figure 30. Compressor

1.4.11 Reconfigurat

[Link to the procedu](#)

Figure 31. Reconfigurat
link

1.5 Maintenance operations


1.5.1 General cleaning of the unit

[Link to the procedure video](#)



1.5.2 Cleaning or filter replacement

[Link to the procedure video](#)

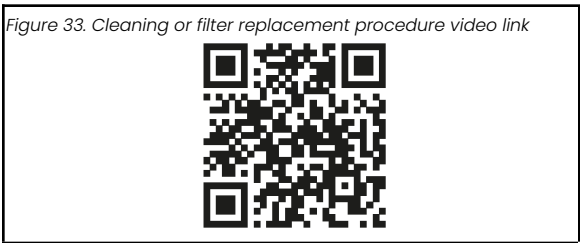

1.5.3 Cleaning or replacement of the batteries

[Link to the procedure video](#)



1.5.4 Cleaning or replacement of the condensate collection tray

[Link to the procedure video](#)




1.5.5 Refrigerant charge check

[Link to the procedure video](#)



1.6 Technical

1.6.1 Electronic board

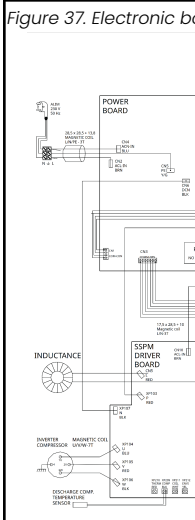

CN13	Input
CN14	Drain Pump
CN15	Drain Alarm
ZE	Internal Air
HU	Internal Air Temperature
CN17 OT	External Temperature Sensor
CN17 OPT	Capacitor
CN7 IPT	Evaporator
CN16 GT	Exhaust Air
XP209	Compressor Temperature

1.6.2 Resistance values

Sensor 15 kΩ @ 25°C

Probe 15 kΩ 3450

T(°C)	Rmin
-30,00	63,96
-29,00	60,58
-28,00	57,40
-27,00	54,40
-26,00	51,59
-25,00	48,94
-24,00	46,44
-23,00	44,09
-22,00	41,87
-21,00	39,78
-20,00	37,80
-19,00	35,94
-18,00	34,18
-17,00	32,52
-16,00	30,96
-15,00	29,47
-14,00	28,07
-13,00	26,75
-12,00	25,49

T(°C)	Rmin	Rcent	Rmax	DR(%)	DT(°C)
-11,00	24,30	25,14	25,84	2,78	0,66
-10,00	23,18	23,95	24,59	2,67	0,64
-9,00	22,12	22,82	23,42	2,63	0,62
-8,00	21,11	21,75	22,31	2,57	0,61
-7,00	20,15	20,74	21,26	2,51	0,60
-6,00	19,25	19,79	20,26	2,37	0,57
-5,00	18,39	18,88	19,32	2,33	0,55
-4,00	17,57	18,02	18,43	2,28	0,54
-3,00	16,80	17,20	17,58	2,21	0,52
-2,00	16,06	16,43	16,78	2,13	0,50
-1,00	15,36	15,70	16,02	2,04	0,49
0,00	14,70	15,00	15,30	2,00	0,46
1,00	14,04	14,34	14,64	2,09	0,49
2,00	13,42	13,71	14,02	2,26	0,51
3,00	12,83	13,11	13,42	2,36	0,53
4,00	12,27	12,55	12,86	2,47	0,56
5,00	11,73	12,01	12,32	2,58	0,59
6,00	11,22	11,50	11,81	2,70	0,62
7,00	10,74	11,01	11,32	2,82	0,64
8,00	10,28	10,55	10,86	2,94	0,67
9,00	9,85	10,10	10,41	3,07	0,37
10,00	9,43	9,68	9,99	3,18	0,32
11,00	9,04	9,28	9,59	3,30	0,74
12,00	8,66	8,90	9,21	3,40	0,77
13,00	8,30	8,54	8,84	3,51	0,80
14,00	7,96	8,19	8,49	3,62	0,82
15,00	7,63	7,86	8,16	3,74	0,85
16,00	7,33	7,55	7,84	3,85	0,88
17,00	7,03	7,25	7,54	3,96	0,90
18,00	6,75	6,96	7,25	4,08	0,93
19,00	6,48	6,69	6,97	4,19	0,96
20,00	6,22	6,43	6,70	4,29	0,99
21,00	5,98	6,18	6,45	4,40	1,02
22,00	5,74	5,94	6,21	4,51	1,04
23,00	5,52	5,71	5,97	4,60	1,07
24,00	5,31	5,49	5,75	4,71	1,10
25,00	5,10	5,29	5,54	4,82	1,12
26,00	4,91	5,09	5,34	4,94	1,15
27,00	4,72	4,90	5,14	5,02	1,18
28,00	4,54	4,71	4,96	5,13	1,21
29,00	4,37	4,54	4,78	5,24	1,24
30,00	4,21	4,37	4,61	5,35	1,27
31,00	4,05	4,21	4,44	5,44	1,30
32,00	3,90	4,06	4,28	5,54	1,33
33,00	3,76	3,91	4,13	5,65	1,36
34,00	3,62	3,77	3,99	5,73	1,39
35,00	3,49	3,64	3,85	5,83	1,41
36,00	3,37	3,51	3,72	5,93	1,45
37,00	3,25	3,38	3,59	6,03	1,47
38,00	3,13	3,27	3,46	6,13	1,50
39,00	3,02	3,15	3,35	6,22	1,53
40,00	2,91	3,04	3,23	6,35	1,56
41,00	2,81	2,94	3,13	6,44	1,59
42,00	2,71	2,83	3,02	6,53	1,63

T(°C)	Rmin	Rcent	Rmax	DR(%)	DT(°C)
43,00	2,62	2,74	2,92	6,61	1,67
44,00	2,53	2,65	2,82	6,69	1,68
45,00	2,44	2,56	2,73	6,81	1,72
46,00	2,36	2,47	2,64	6,88	1,76
47,00	2,28	2,39	2,56	6,99	1,78
48,00	2,20	2,31	2,47	7,06	1,82
49,00	2,13	2,23	2,39	7,17	1,13
50,00	2,06	2,16	2,32	7,27	0,72
51,00	1,99	2,09	2,24	7,32	1,91
52,00	1,92	2,02	2,17	7,42	1,94
53,00	1,86	1,96	2,10	7,52	1,98
54,00	1,80	1,89	2,04	7,61	1,99
55,00	1,74	1,83	1,97	7,75	2,04
56,00	1,69	1,77	1,91	7,84	2,08
57,00	1,63	1,72	1,85	7,92	2,11
58,00	1,58	1,66	1,80	7,99	2,14
59,00	1,53	1,61	1,74	8,06	2,17
60,00	1,48	1,56	1,69	8,13	2,19
61,00	1,44	1,51	1,64	8,26	2,23
62,00	1,39	1,47	1,59	8,32	2,28
63,00	1,35	1,42	1,54	8,44	2,32
64,00	1,31	1,38	1,50	8,48	2,34
65,00	1,27	1,34	1,45	8,60	2,37
66,00	1,23	1,30	1,41	8,64	2,41
67,00	1,19	1,26	1,37	8,74	2,42
68,00	1,15	1,22	1,33	8,85	2,45
69,00	1,12	1,18	1,29	8,95	2,52
70,00	1,09	1,15	1,25	9,05	2,56
71,00	1,05	1,12	1,22	9,05	2,61
72,00	1,02	1,08	1,18	9,14	2,58
73,00	0,99	1,05	1,15	9,32	2,64
74,00	0,96	1,02	1,12	9,30	2,69
75,00	0,93	0,99	1,08	9,44	2,71
76,00	0,91	0,96	1,05	9,45	2,74
77,00	0,88	0,94	1,02	9,58	2,77
78,00	0,86	0,91	1,00	9,66	2,81
79,00	0,83	0,88	0,97	9,74	2,85
80,00	0,81	0,86	0,94	9,81	2,88
81,00	0,78	0,83	0,92	9,89	2,92
82,00	0,76	0,81	0,89	9,96	2,95
83,00	0,74	0,79	0,87	10,03	2,99
84,00	0,72	0,77	0,84	10,12	3,02
85,00	0,70	0,75	0,82	10,19	3,05
86,00	0,68	0,72	0,80	10,28	3,09
87,00	0,66	0,71	0,78	10,35	1,98
88,00	0,64	0,69	0,76	10,42	1,15
89,00	0,63	0,67	0,74	10,50	3,20
90,00	0,61	0,65	0,72	10,58	3,24
91,00	0,59	0,63	0,70	10,66	3,30
92,00	0,58	0,62	0,68	10,72	3,33
93,00	0,56	0,60	0,66	10,81	3,36
94,00	0,55	0,58	0,65	10,86	3,40
95,00	0,53	0,57	0,63	10,94	3,43
96,00	0,52	0,55	0,61	11,00	3,47

T(°C)	Rmin
97,00	0,50
98,00	0,49
99,00	0,48
100,00	0,47
101,00	0,45
102,00	0,44
103,00	0,43
104,00	0,42
105,00	0,41
106,00	0,40
107,00	0,39
108,00	0,38
109,00	0,37
110,00	0,36

Probe 187 kΩ @0 °C
Probe 187 kΩ 3979

T(°C)	Rmin
-30,00	891,20
-29,00	840,30
-28,00	792,60
-27,00	747,80
-26,00	705,80
-25,00	666,40
-24,00	629,40
-23,00	594,60
-22,00	562,00
-21,00	531,30
-20,00	502,50
-19,00	475,40
-18,00	449,90
-17,00	425,90
-16,00	403,20
-15,00	382,00
-14,00	361,90
-13,00	343,00
-12,00	325,20
-11,00	308,40
-10,00	292,60
-9,00	277,60
-8,00	263,50
-7,00	250,20
-6,00	237,60
-5,00	225,80
-4,00	214,50
-3,00	203,90
-2,00	193,90
-1,00	184,40
0,00	175,50
1,00	167,00
2,00	159,00
3,00	151,40
4,00	144,20

T(°C)	Rmin	Rcent	Rmax	DR(%)	DT(°C)
5,00	137,40	146,00	155,00	6,16	1,29
6,00	130,90	139,00	147,60	6,19	1,30
7,00	124,80	132,50	140,50	6,04	1,30
8,00	119,00	126,30	133,90	6,02	1,29
9,00	113,50	120,40	127,60	5,98	1,29
10,00	108,30	114,80	121,60	5,92	1,28
11,00	103,30	109,50	115,90	5,84	0,61
12,00	98,63	104,40	110,50	5,84	1,27
13,00	94,16	99,66	105,40	5,76	1,27
14,00	89,92	95,13	100,60	5,75	1,27
15,00	85,89	90,82	95,98	5,68	1,26
16,00	82,06	86,74	91,62	5,63	1,26
17,00	78,43	82,85	87,47	5,58	1,25
18,00	74,97	79,16	83,54	5,53	1,25
19,00	71,68	75,65	79,80	5,49	1,25
20,00	68,55	72,32	76,25	5,43	1,24
21,00	65,57	69,15	72,88	5,39	1,24
22,00	62,74	66,13	69,67	5,35	1,24
23,00	60,05	63,27	66,61	5,28	1,23
24,00	57,48	60,54	63,71	5,24	1,23
25,00	55,04	57,94	60,95	5,20	1,22
26,00	52,71	55,46	58,32	5,16	1,22
27,00	50,49	53,11	55,82	5,10	1,22
28,00	48,38	50,86	53,44	5,07	1,21
29,00	46,36	48,72	51,17	5,03	1,21
30,00	44,44	46,68	49,01	4,99	1,21
31,00	42,61	44,74	46,95	4,94	1,20
32,00	40,87	42,89	44,99	4,90	1,20
33,00	39,20	41,13	43,12	4,84	1,19
34,00	37,61	39,44	41,34	4,82	1,19
35,00	36,10	37,84	39,64	4,76	1,18
36,00	34,65	36,30	38,02	4,74	1,18
37,00	33,26	34,84	36,47	4,68	1,18
38,00	31,94	33,44	34,99	4,64	1,17
39,00	30,68	32,11	33,58	4,58	1,17
40,00	29,47	30,83	32,24	4,57	1,16
41,00	28,32	29,61	30,95	4,53	1,16
42,00	27,22	28,45	29,72	4,46	1,16
43,00	26,16	27,34	28,55	4,43	1,15
44,00	25,15	26,27	27,43	4,42	1,15
45,00	24,19	25,25	26,35	4,36	1,14
46,00	23,26	24,28	25,33	4,32	1,14
47,00	22,38	23,35	24,35	4,28	1,14
48,00	21,53	22,46	23,41	4,23	1,13
49,00	20,72	21,60	22,51	4,21	1,13
50,00	19,95	20,79	21,65	4,14	1,12
51,00	19,20	20,01	20,83	4,10	0,57
52,00	18,49	19,26	20,04	4,05	0,54
53,00	17,81	18,54	19,29	4,05	1,10
54,00	17,15	17,85	18,57	4,03	1,10
55,00	16,53	17,19	17,87	3,96	1,09
56,00	15,93	16,56	17,21	3,93	1,09
57,00	15,35	15,96	16,58	3,88	1,09
58,00	14,80	15,38	15,97	3,84	1,08


T(°C)	Rmin	Rcent	Rmax	DR(%)	DT(°C)
59,00	14,27	14,82	15,39	3,85	1,08
60,00	13,76	14,29	14,83	3,78	1,08
61,00	13,27	13,78	14,29	3,70	1,06
62,00	12,80	13,28	13,78	3,77	1,06
63,00	12,35	12,81	13,28	3,67	1,06
64,00	11,92	12,36	12,81	3,64	1,06
65,00	11,51	11,93	12,36	3,60	1,05
66,00	11,11	11,51	11,92	3,56	1,04
67,00	10,72	11,11	11,50	3,51	1,05
68,00	10,36	10,73	11,10	3,45	1,04
69,00	10,00	10,36	10,71	3,38	1,02
70,00	9,66	10,00	10,34	3,40	1,02
71,00	9,34	9,66	9,99	3,40	1,02
72,00	9,02	9,33	9,64	3,37	1,02
73,00	8,72	9,02	9,32	3,33	1,01
74,00	8,43	8,71	9,00	3,31	1,01
75,00	8,15	8,42	8,60	2,07	1,01
76,00	7,88	8,14	8,40	3,23	1,00
77,00	7,62	7,87	8,12	3,20	0,99
78,00	7,37	7,61	7,85	3,17	0,99
79,00	7,13	7,36	7,59	3,13	0,98
80,00	6,90	7,12	7,34	3,09	0,97
81,00	6,68	6,88	7,10	3,08	0,97
82,00	6,46	6,66	6,86	3,03	0,96
83,00	6,25	6,45	6,64	3,01	0,96
84,00	6,05	6,24	6,42	2,98	0,95
85,00	5,86	6,04	6,22	2,95	0,95
86,00	5,68	5,85	6,02	2,93	0,94
87,00	5,50	5,66	5,82	2,88	0,94
88,00	5,33	5,48	5,64	2,85	0,93
89,00	5,16	5,31	5,46	2,83	0,93
90,00	5,00	5,14	5,29	2,78	0,93
91,00	4,84	4,98	5,12	2,77	0,46
92,00	4,70	4,83	4,96	2,73	0,45
93,00	4,55	4,68	4,80	2,71	0,91
94,00	4,41	4,53	4,66	2,67	0,90
95,00	4,28	4,39	4,51	2,64	0,89
96,00	4,15	4,26	4,37	2,63	0,89
97,00	4,03	4,13	4,24	2,59	0,88
98,00	3,90	4,01	4,11	2,55	0,87
99,00	3,79	3,89	3,98	2,55	0,87
100,00	3,68	3,77	3,86	2,49	0,87
101,00	3,56	3,66	3,75	2,52	0,88
102,00	3,46	3,55	3,64	2,56	0,89
103,00	3,35	3,44	3,53	2,58	0,91
104,00	3,26	3,34	3,43	2,60	0,92
105,00	3,16	3,25	3,33	2,62	0,93
106,00	3,07	3,15	3,23	2,67	0,95
107,00	2,98	3,06	3,14	2,68	0,96
108,00	2,89	2,97	3,05	2,73	0,97
109,00	2,81	2,88	2,96	2,77	0,99
110,00	2,72	2,80	2,88	2,75	1,00
111,00	2,65	2,72	2,80	2,83	1,01
112,00	2,57	2,64	2,72	2,84	1,04

T(°C)	Rmin
113,00	2,50
114,00	2,42
115,00	2,36
116,00	2,29
117,00	2,23
118,00	2,16
119,00	2,10
120,00	2,04
121,00	1,99
122,00	1,93
123,00	1,88
124,00	1,83
125,00	1,78
126,00	1,73
127,00	1,68
128,00	1,64
129,00	1,60
130,00	1,55



With over 20 years of experience in the climate comfort sector, we have a clear goal: growth through innovation. Our team is laser-focused on the conception, development, and production of innovative heating, ventilation, and air conditioning solutions. This mission has developed through bringing together technical skills, creativity, technology, design, Italian passion, and a global vision to achieve the best energy efficiency and performance.

innova.co | **USA:** 216-710-1000 **Canada:** 416-739-1000



© 2026 INNOVA. All rights reserved.

Revised August 6, 2026

AIO™ Vertical Stack **Troubleshooting Manual**